

 
 
 
Luxor ZDC App

Luxor Splash Screen

Loading/Connecting Screen

Overview Screen

Master Power-off Message Screen
(Message appears when user presses the non-active power button)

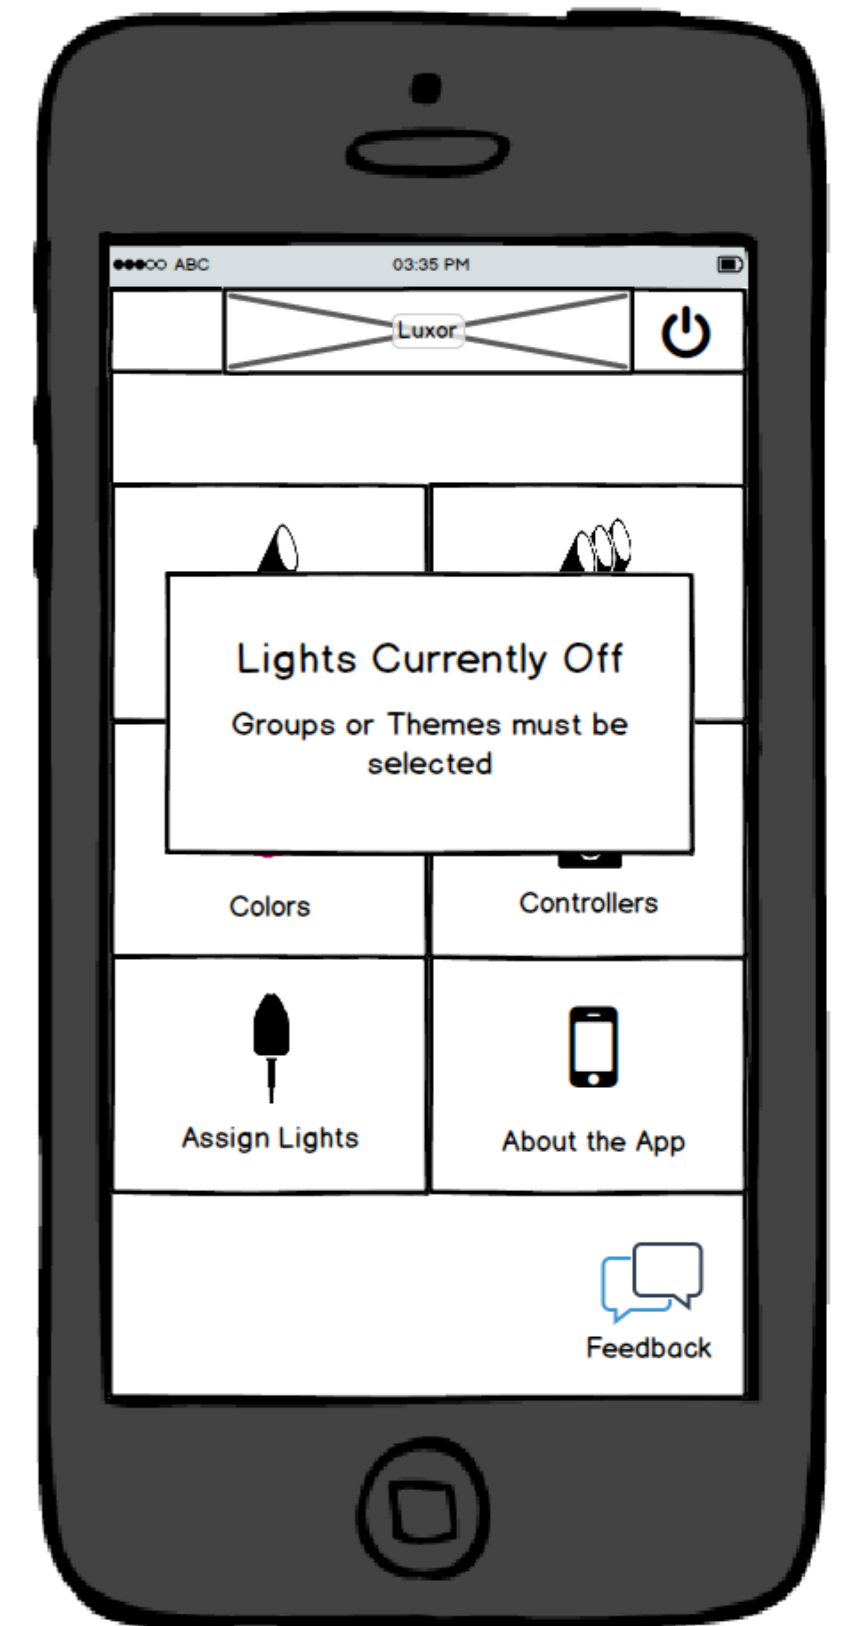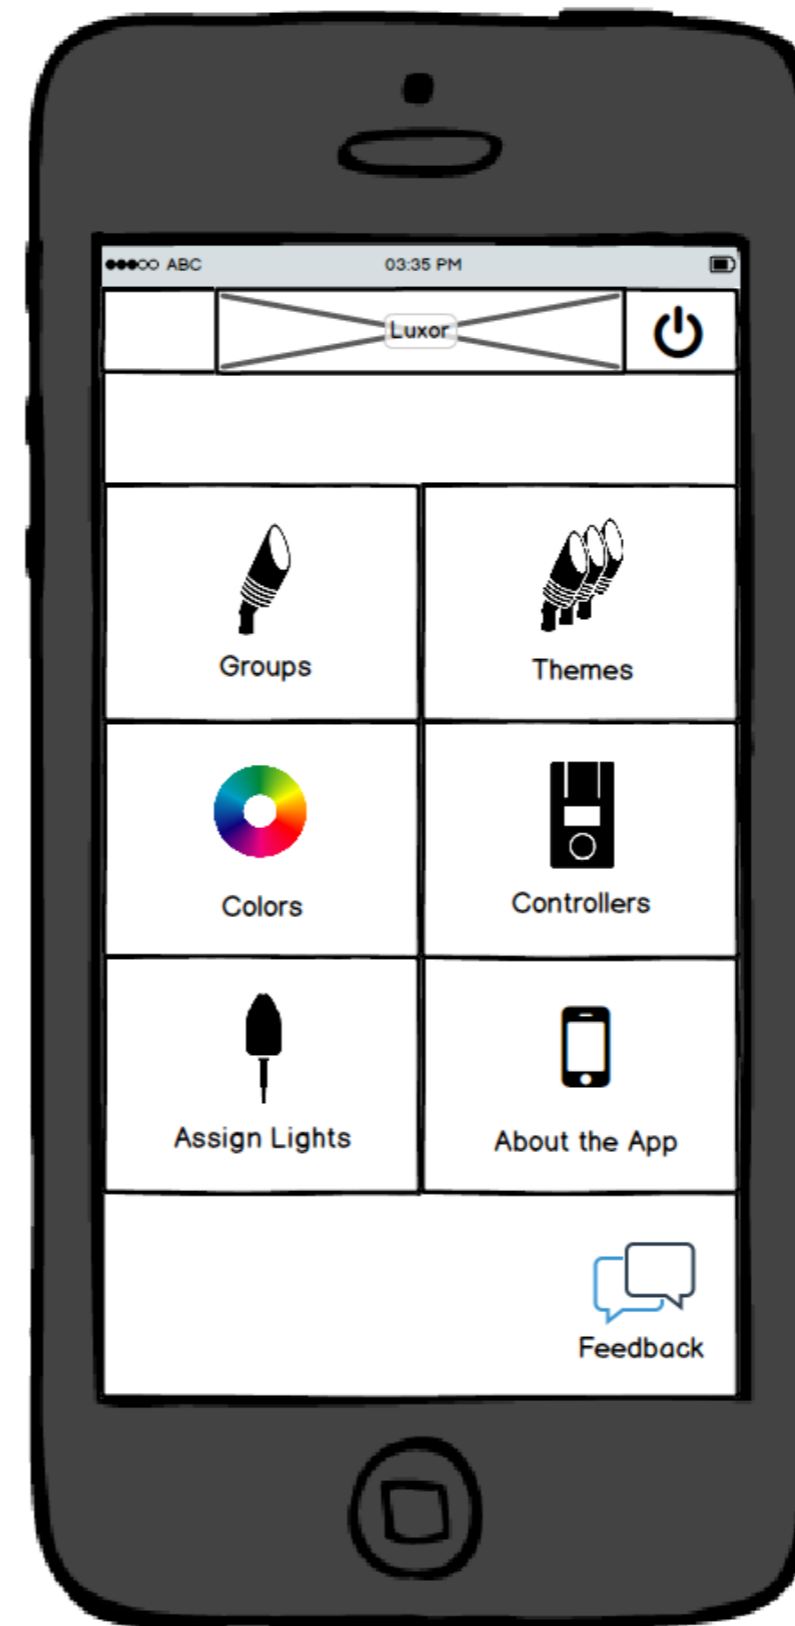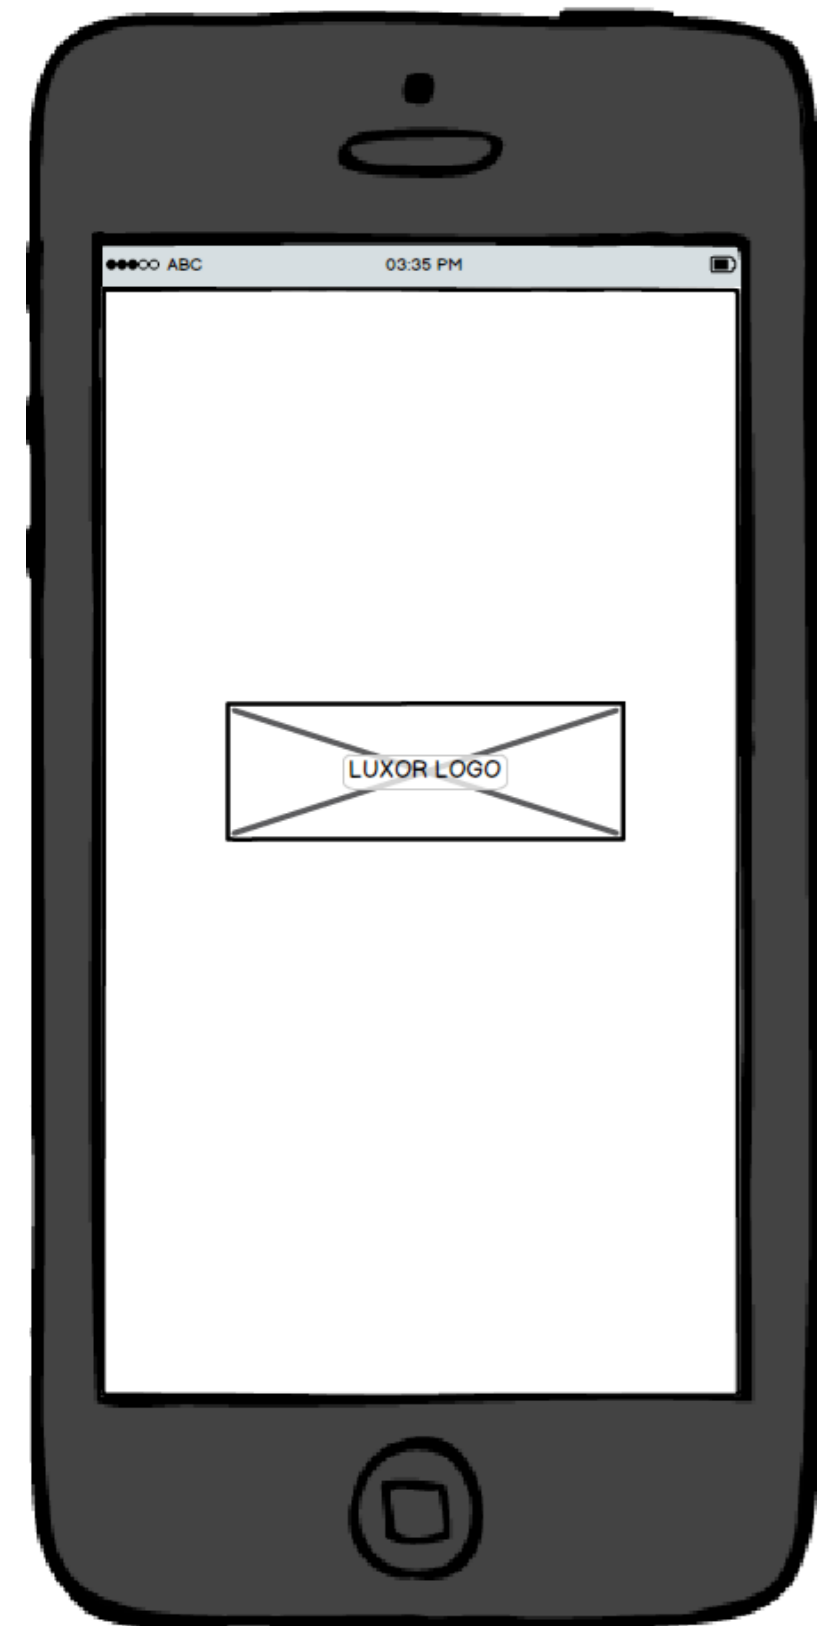





Group overview screen

Group Main Screen

Swipe Right Options

Gear Screen Options

  Search Screen Pull-down Feature/View

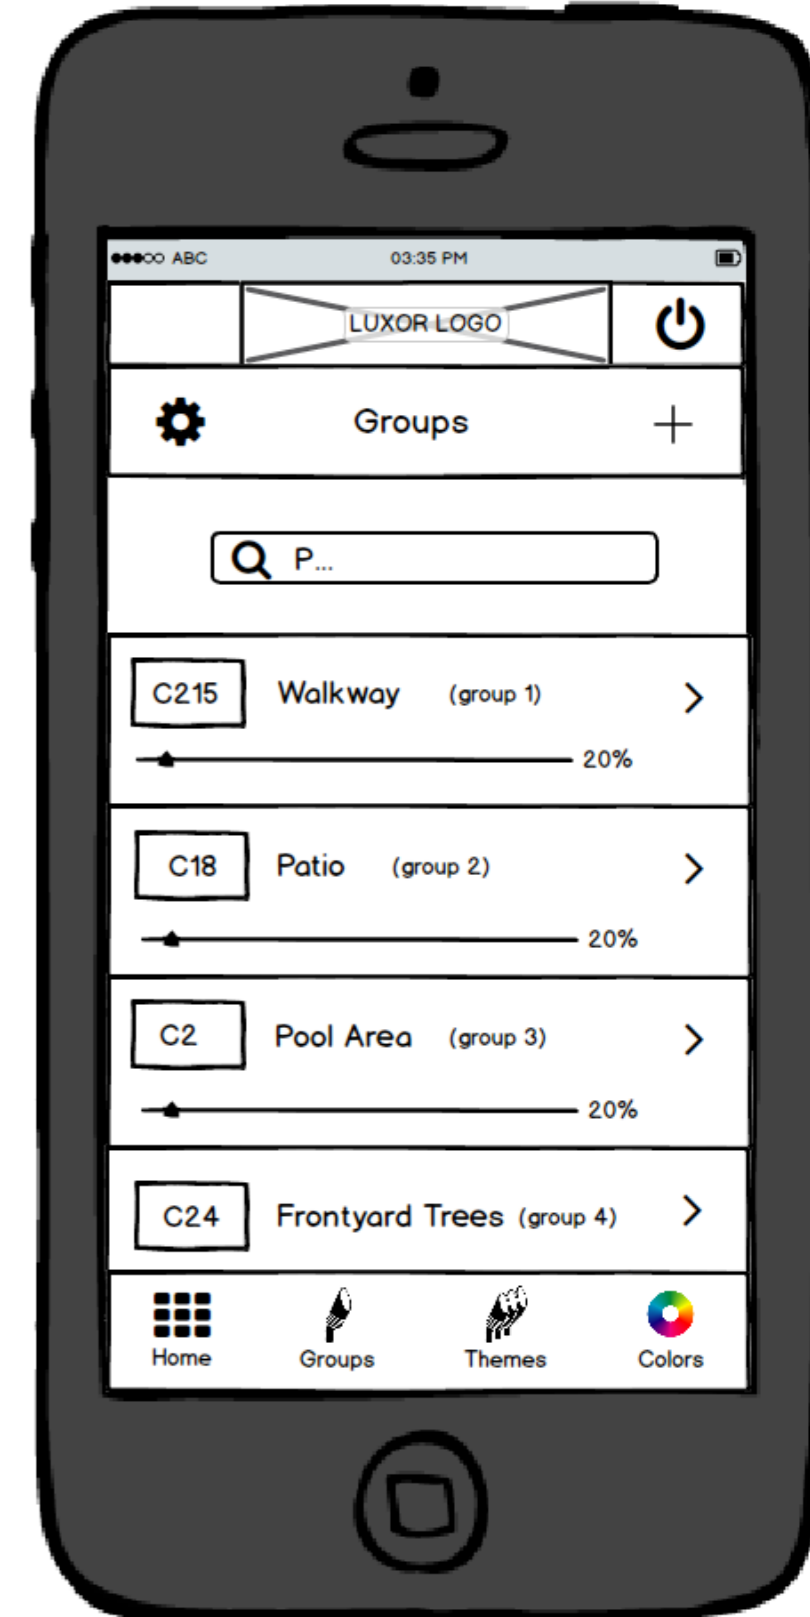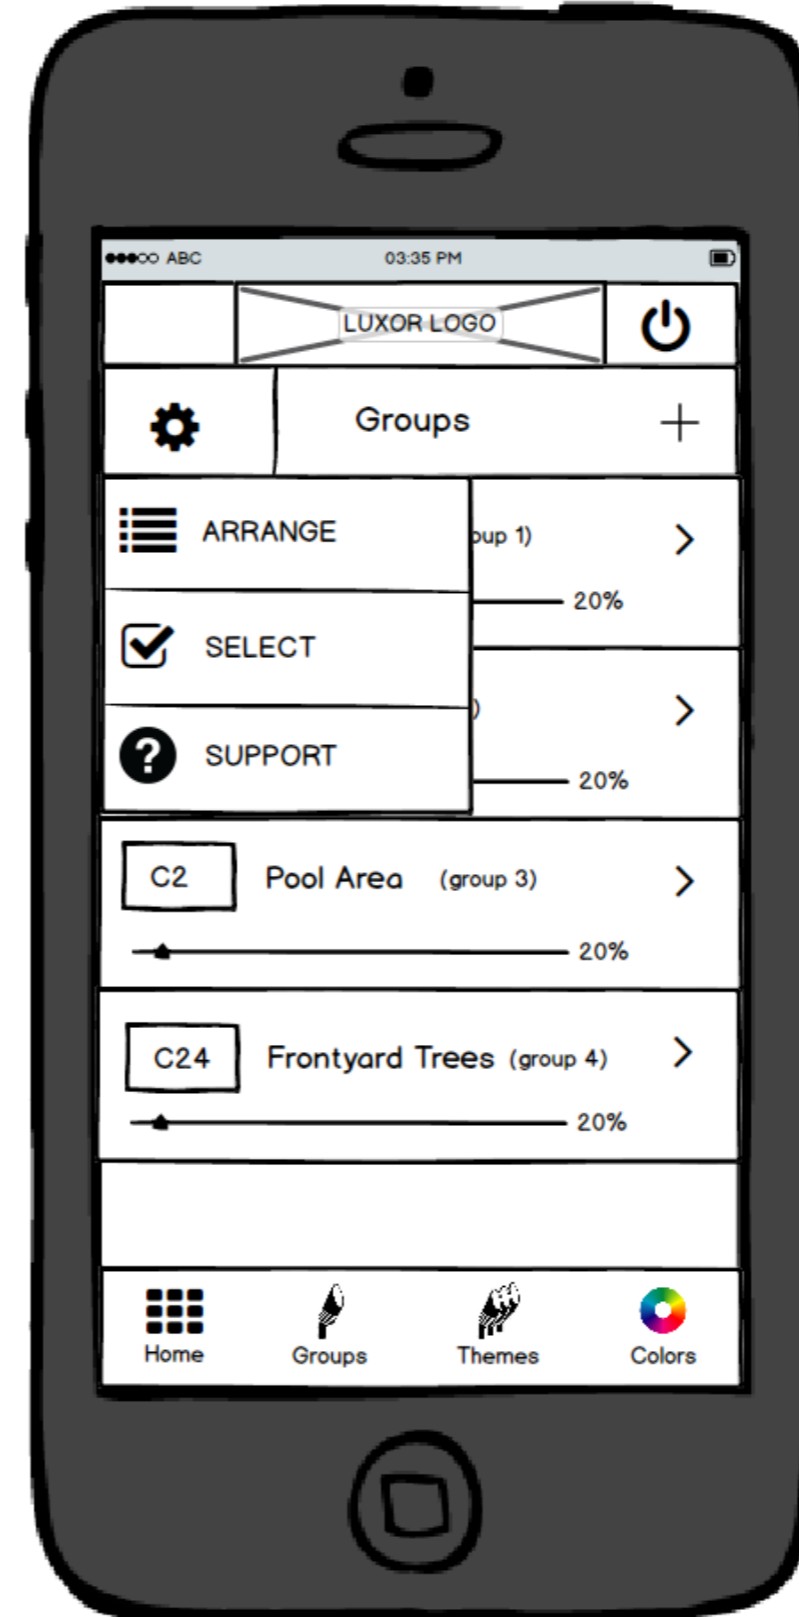
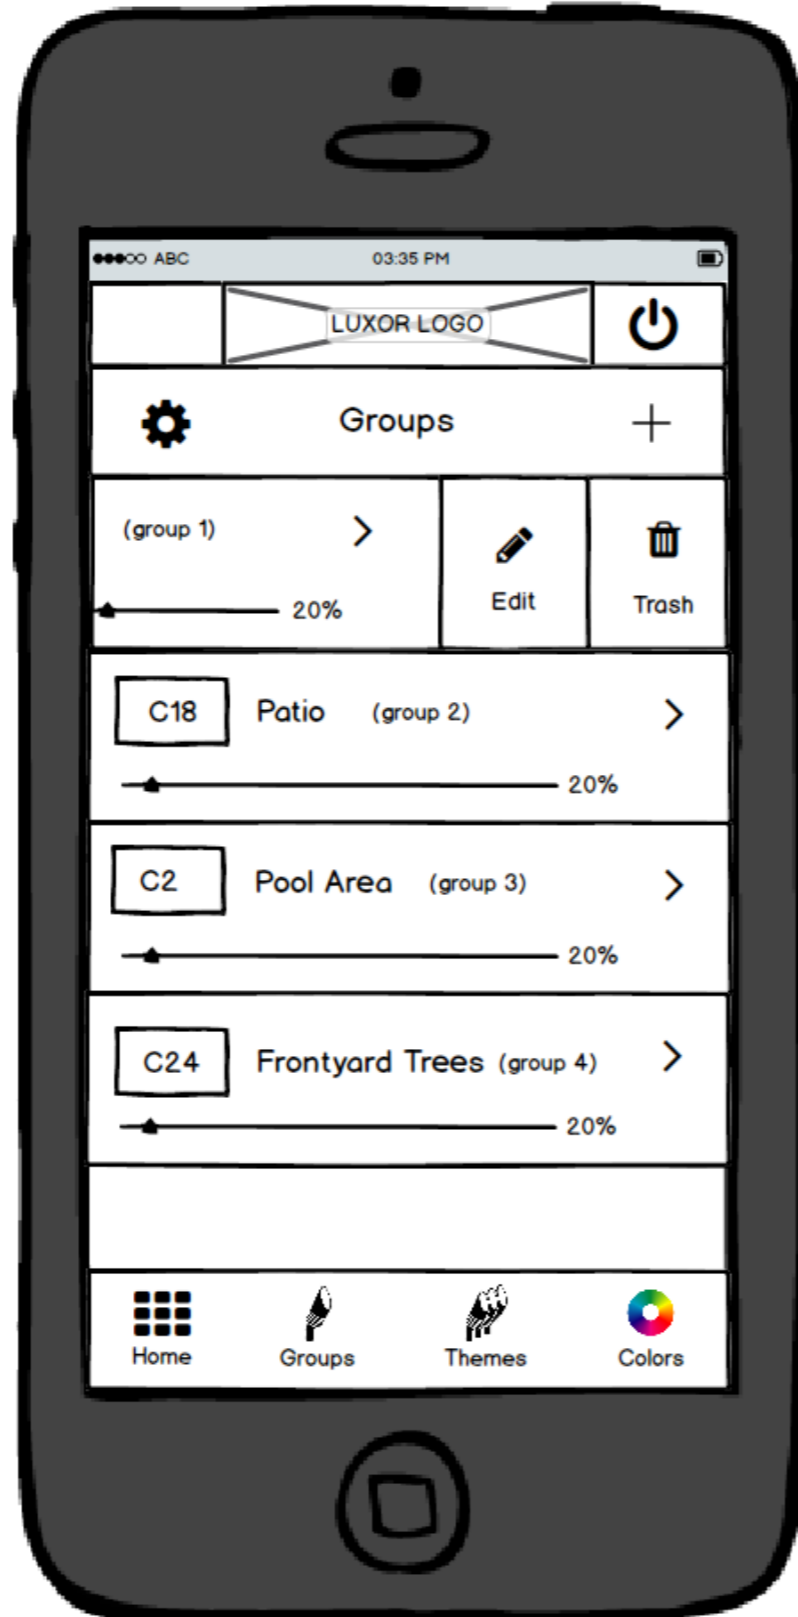
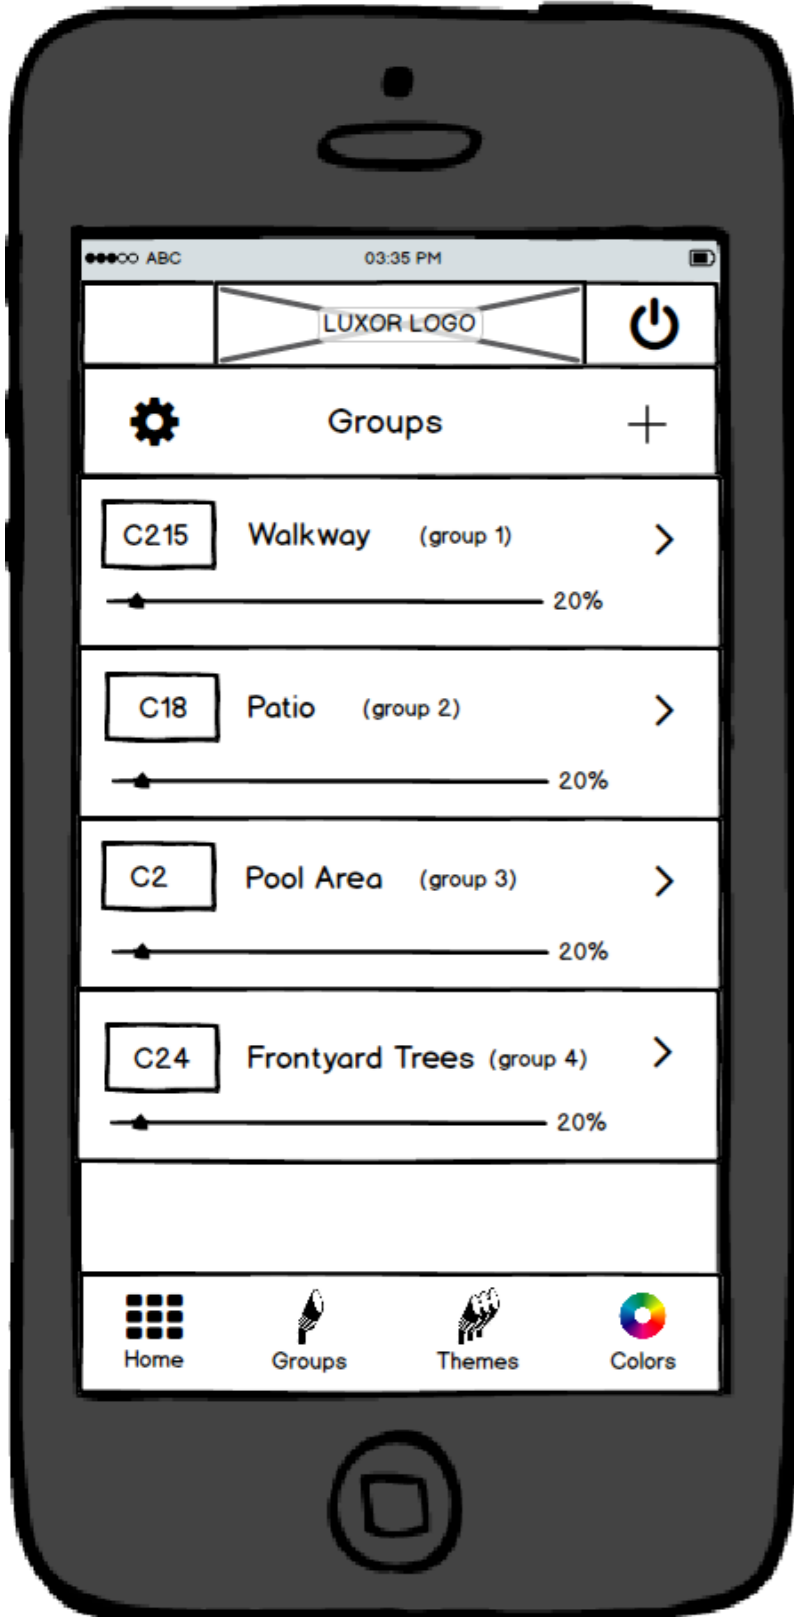


Group Select & Create Theme Screen

Select Options


Selected Screen View

Confirmation Message Overlay

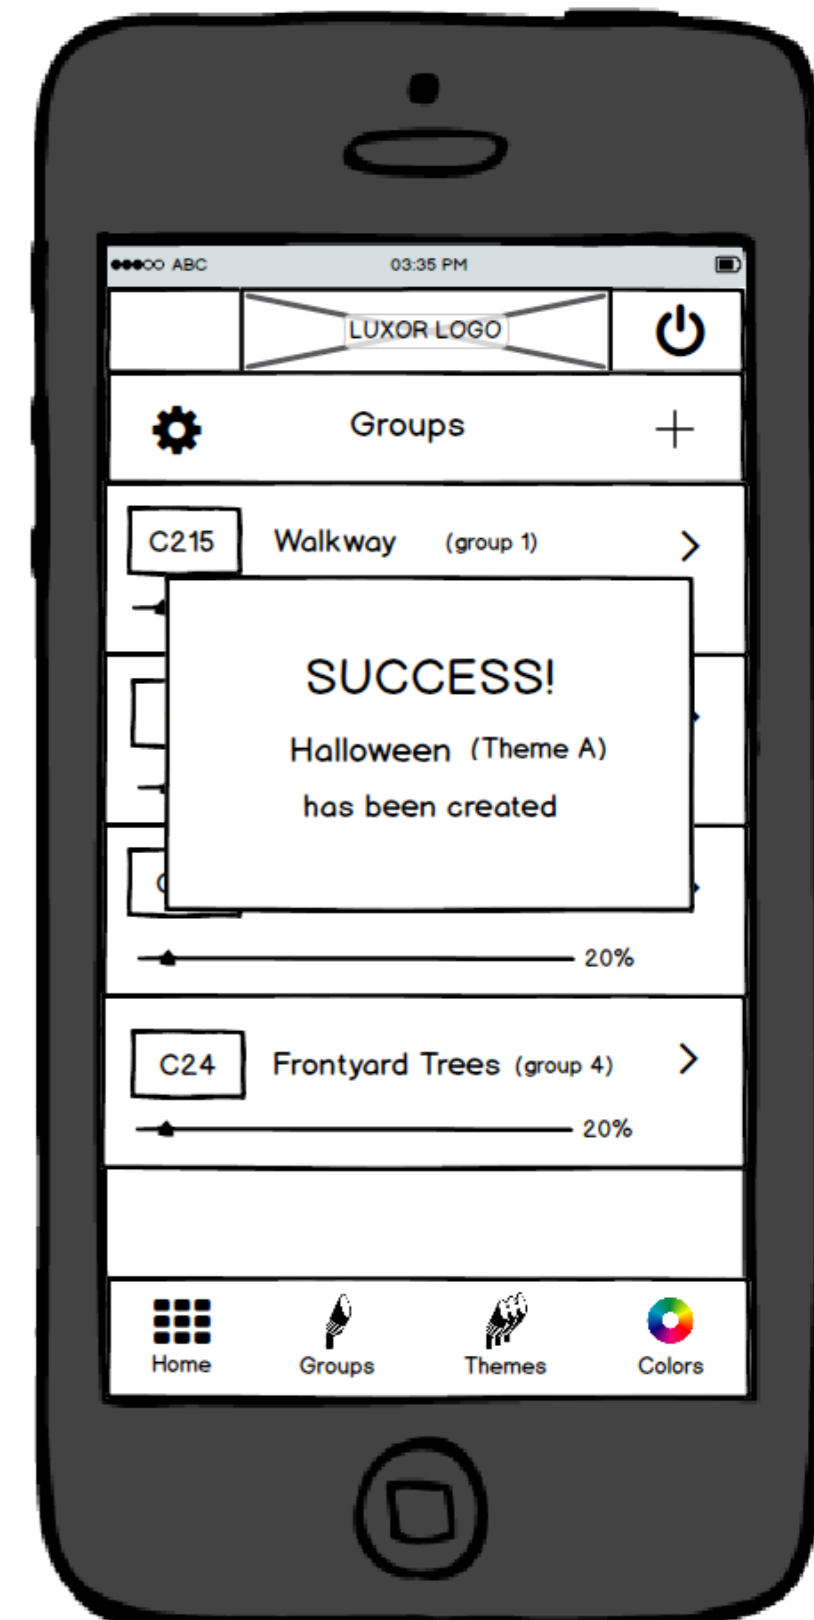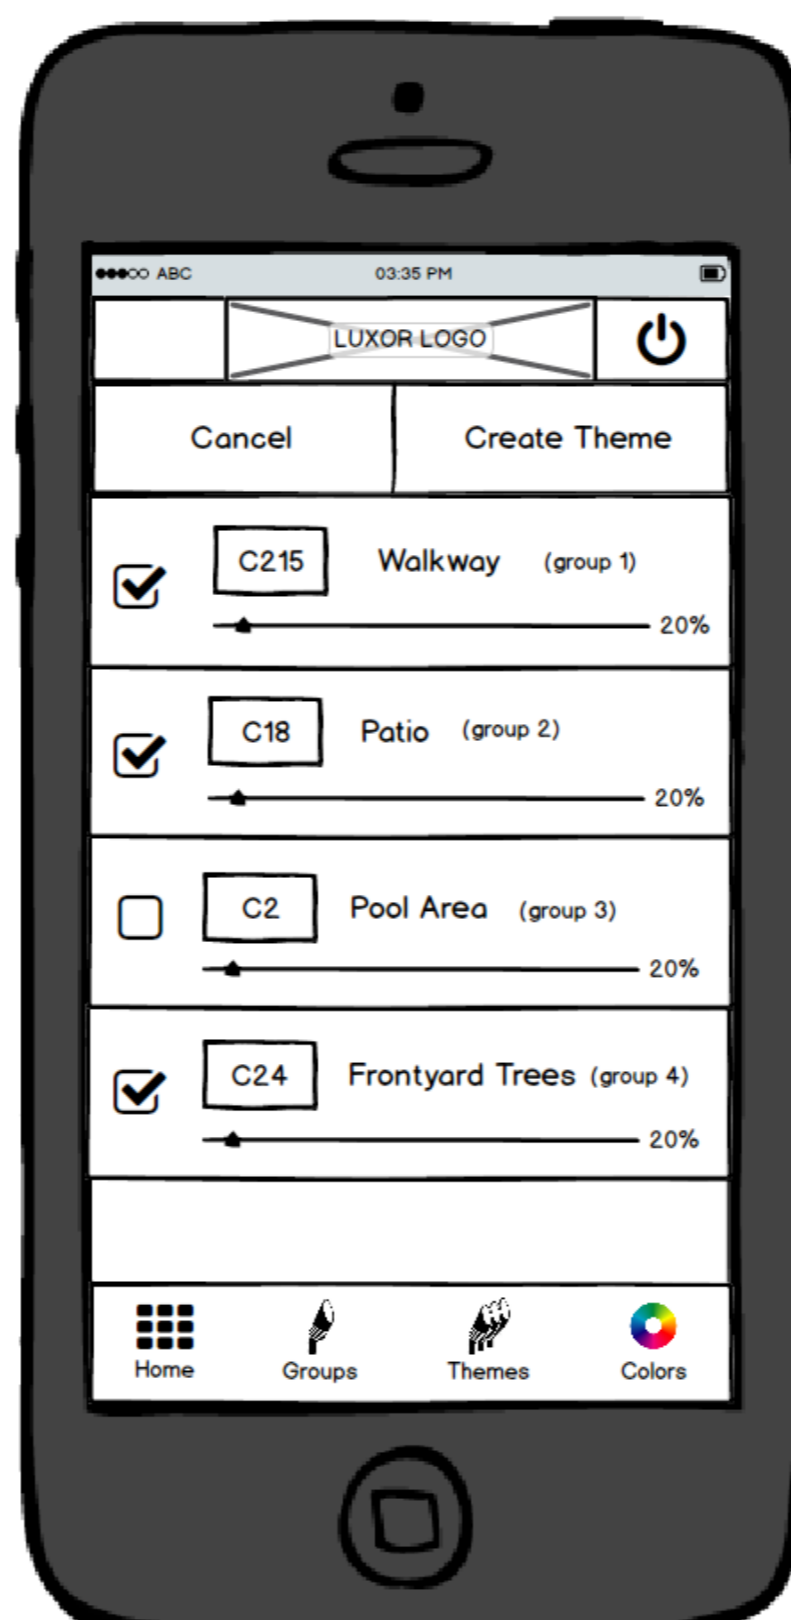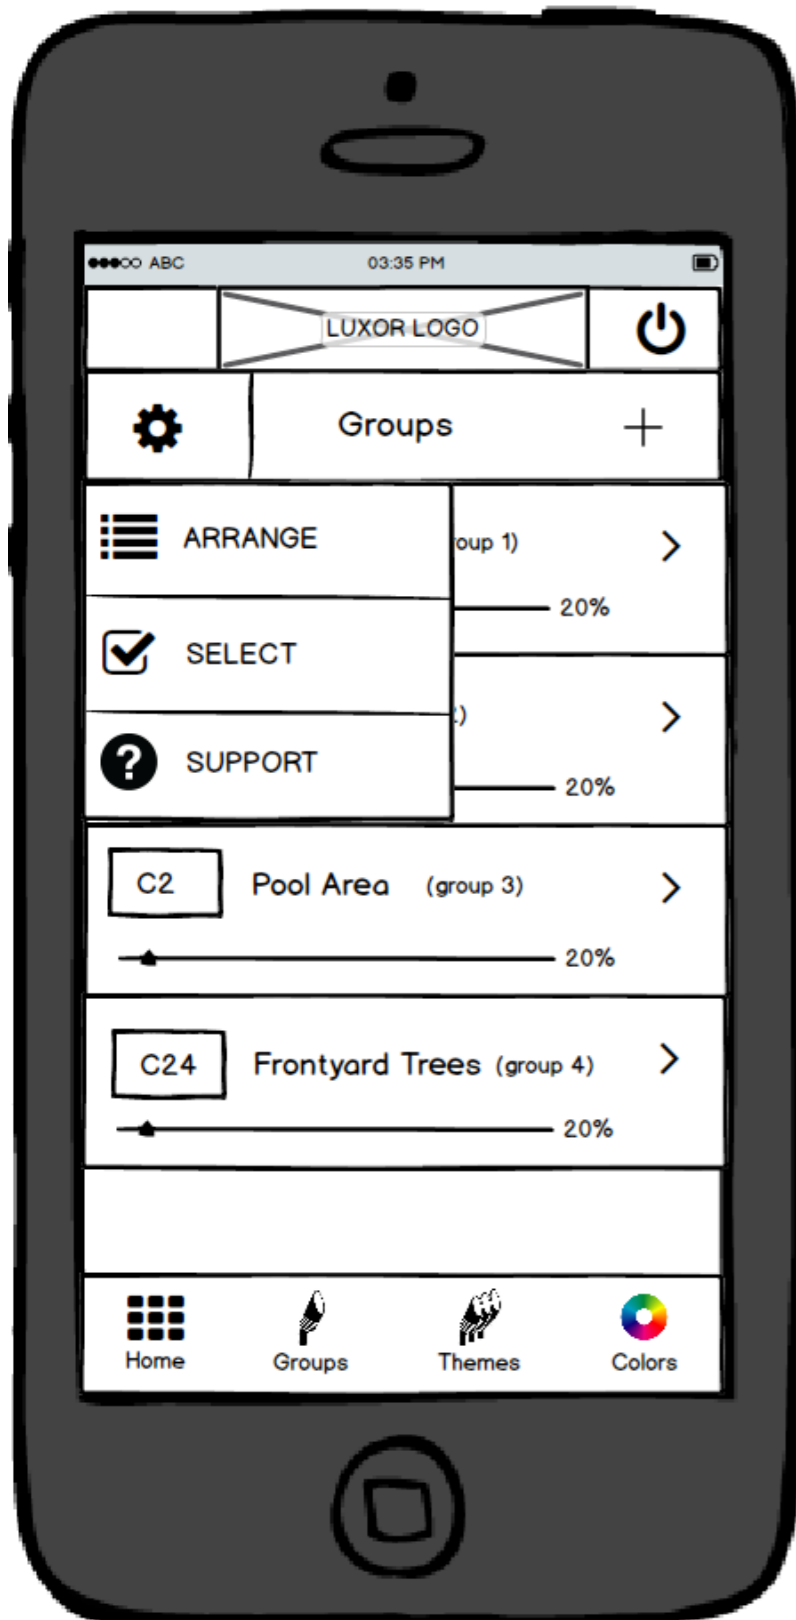


Group Add/Detail and Overlay Message Screens

 Group Add/Detail Screen

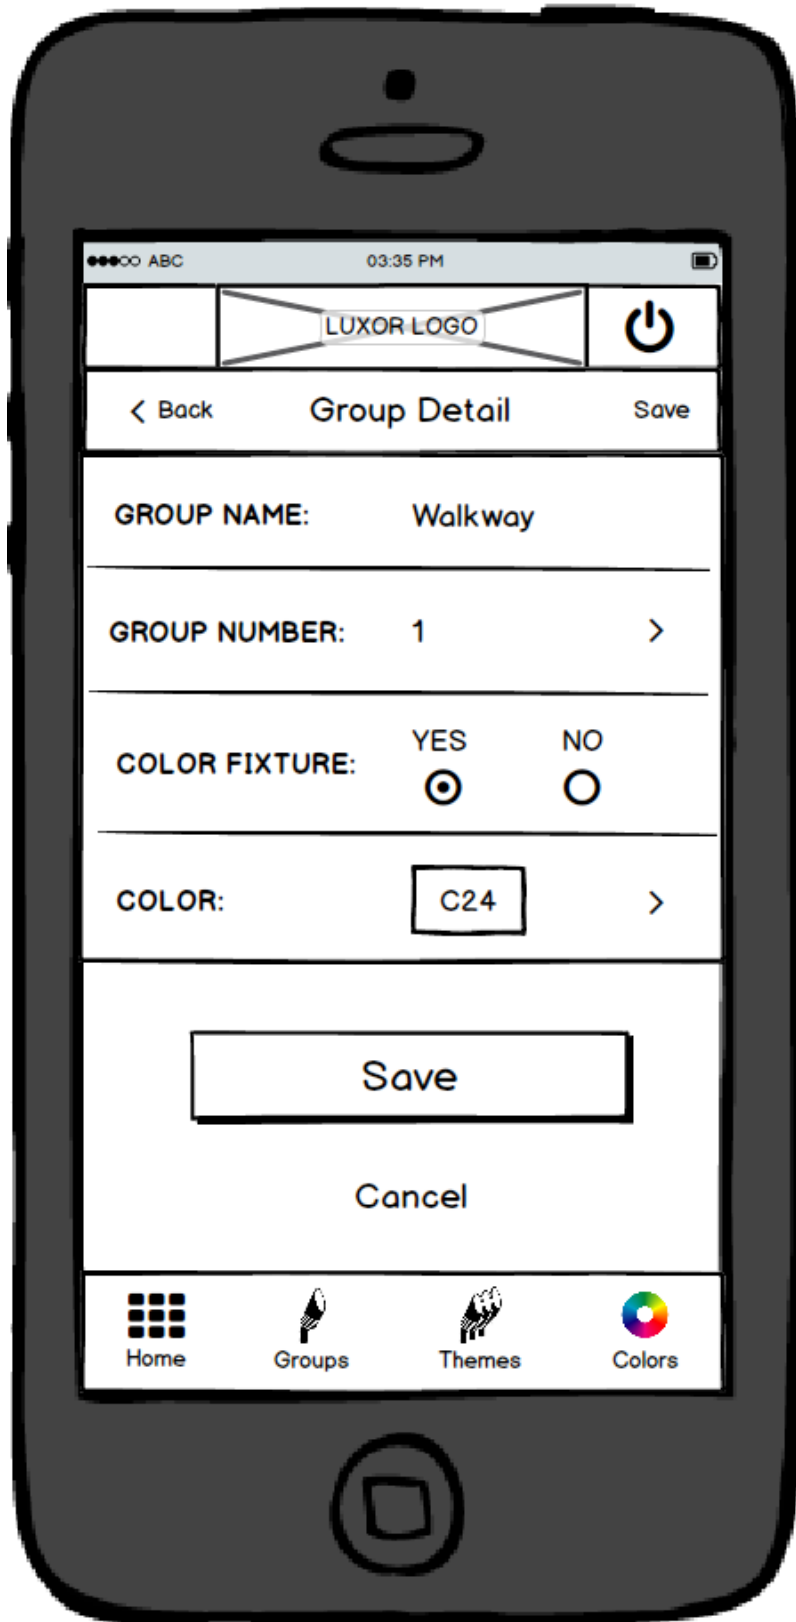


Delete Confirmation Screen

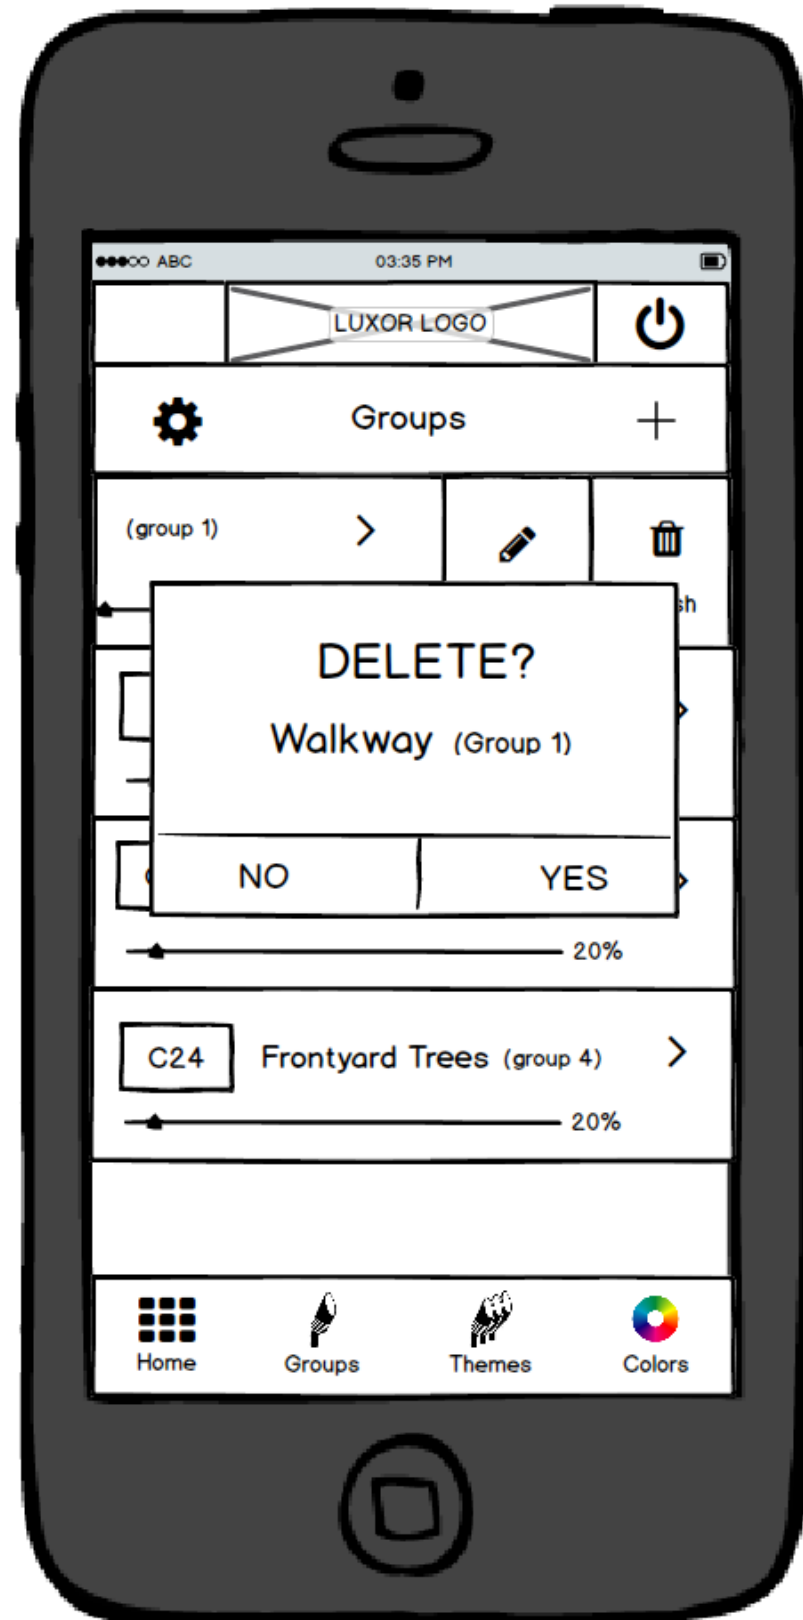 

Theme screens


Theme Main Screen

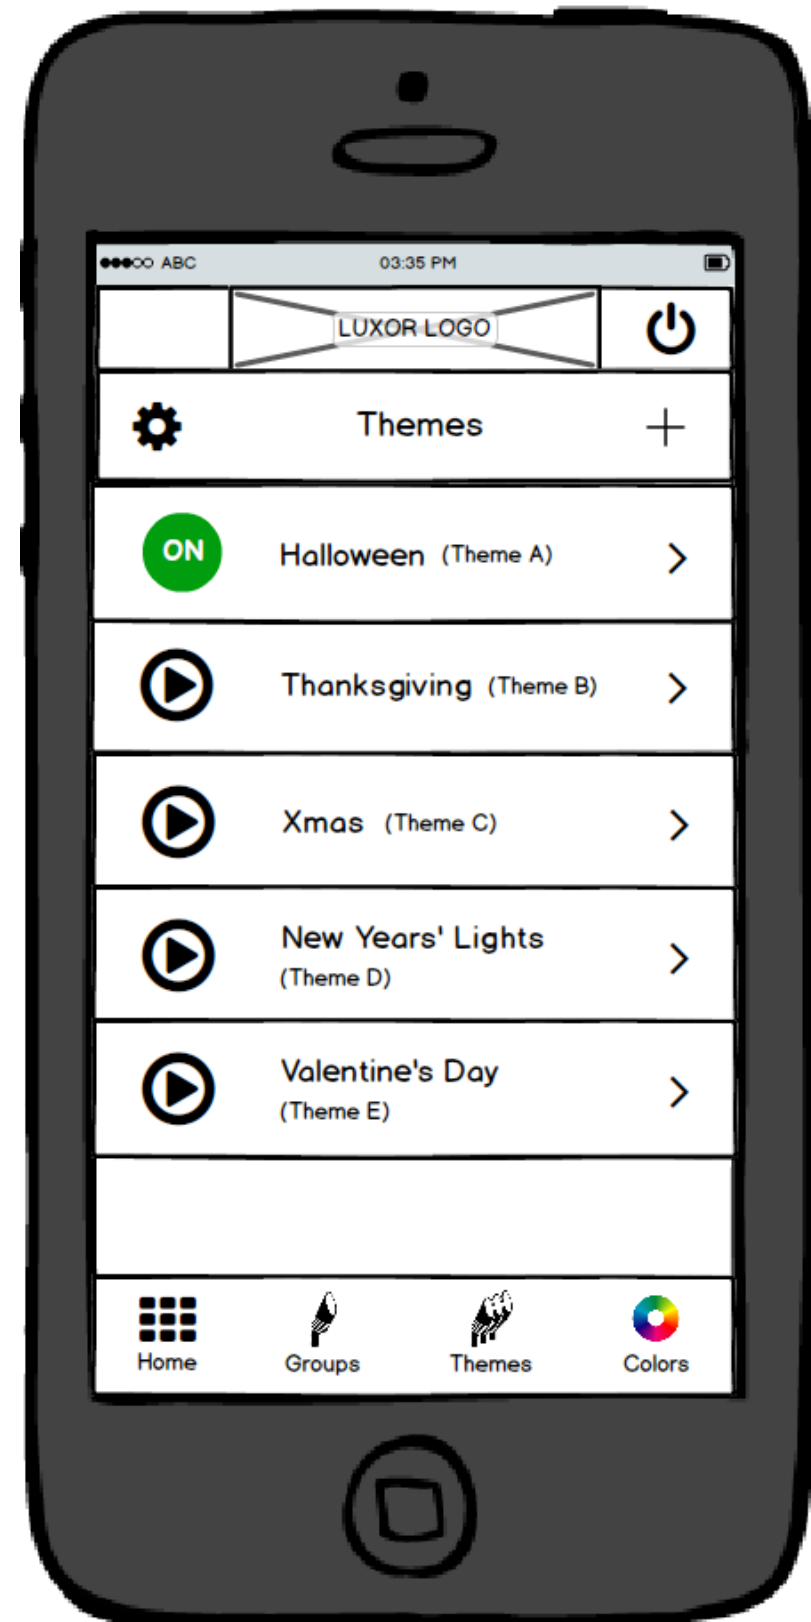


Swipe Right Options



 Gear Screen Options

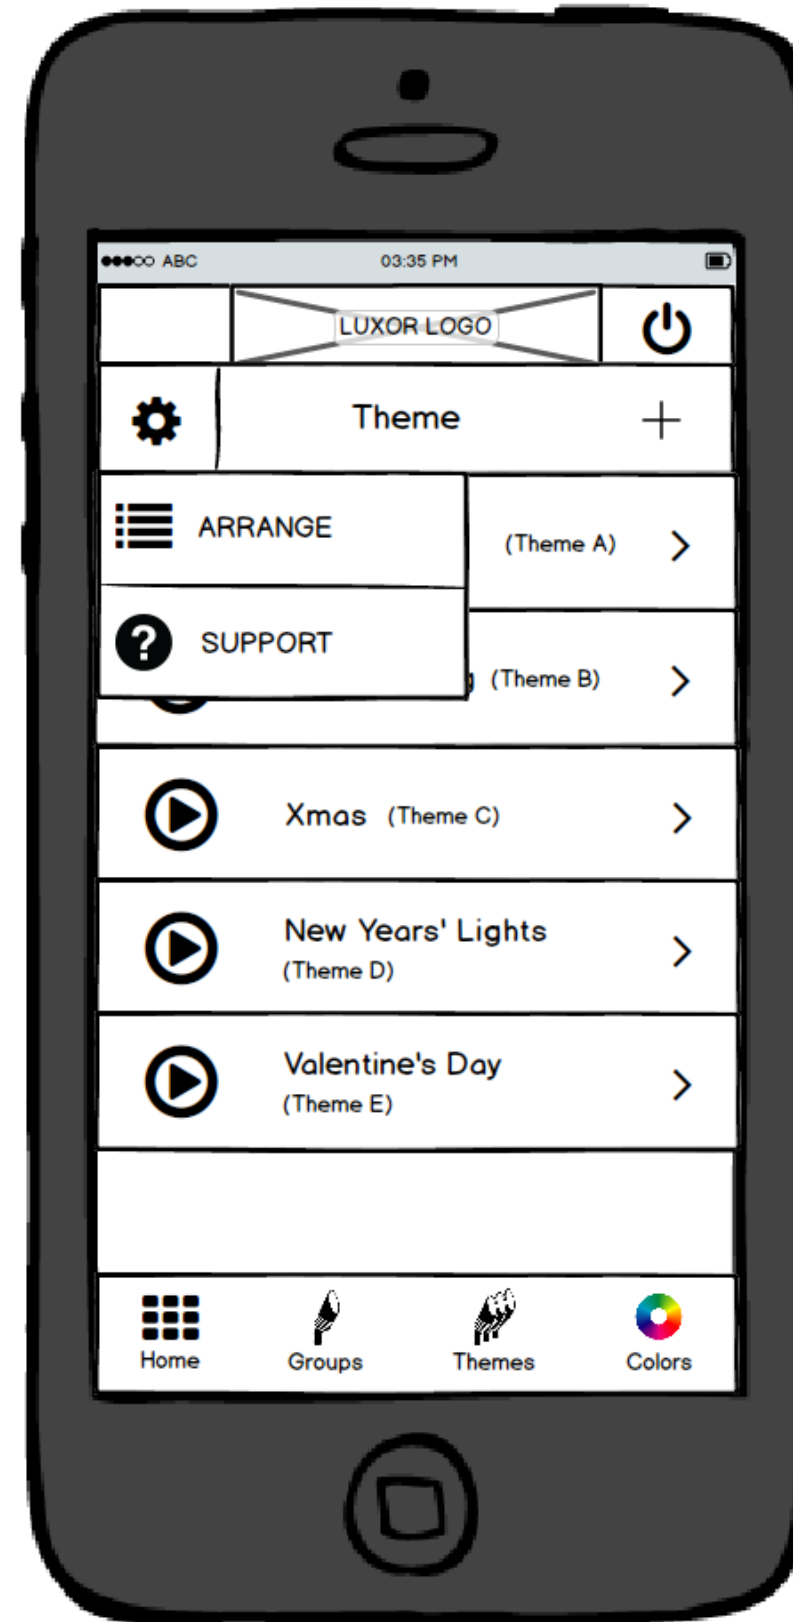


Theme Add/Detail Screen

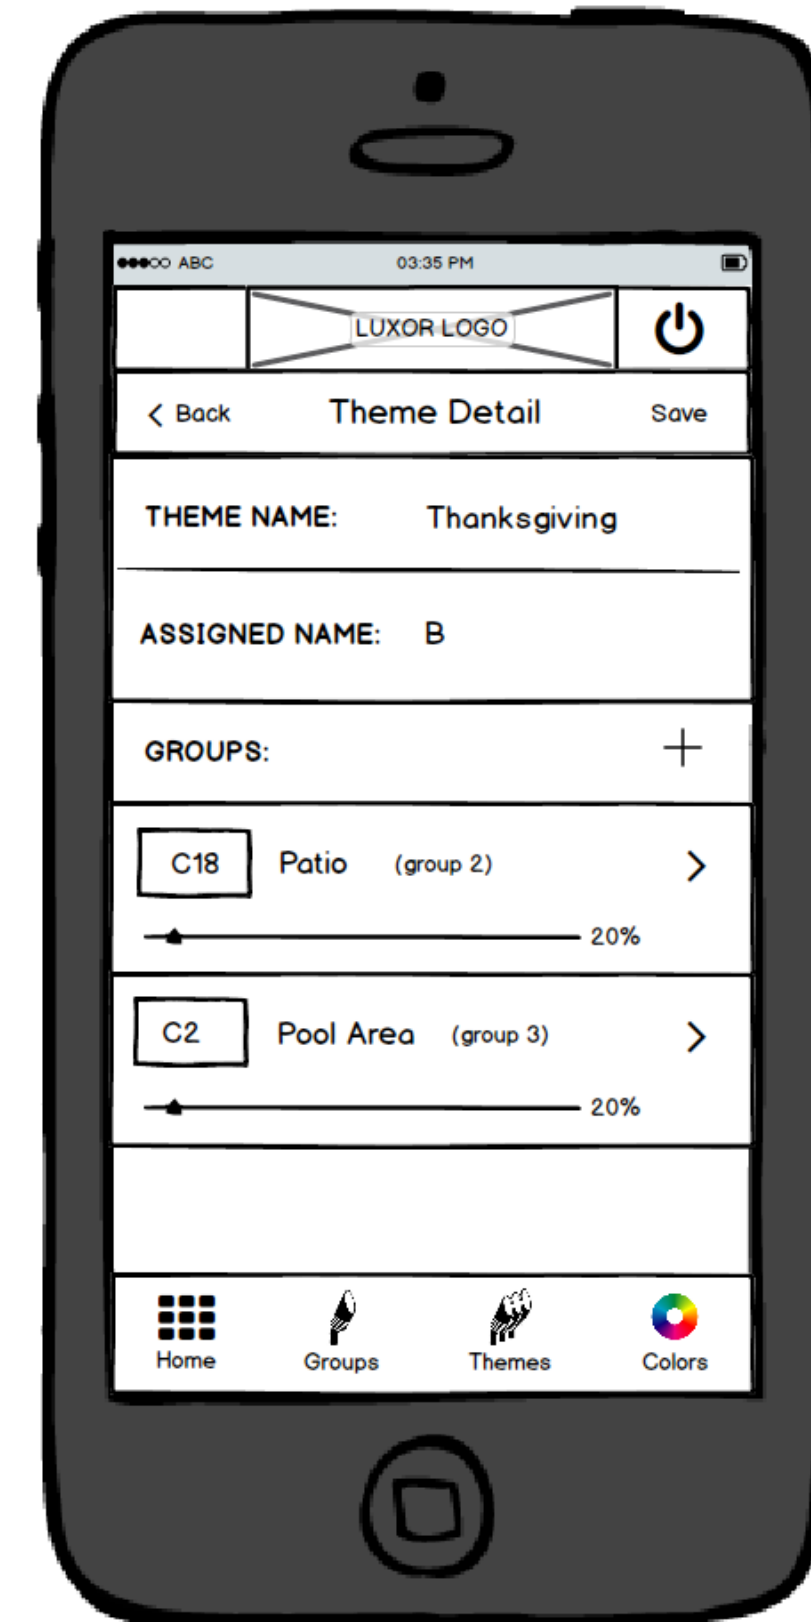


Color screens


Color Main Screen

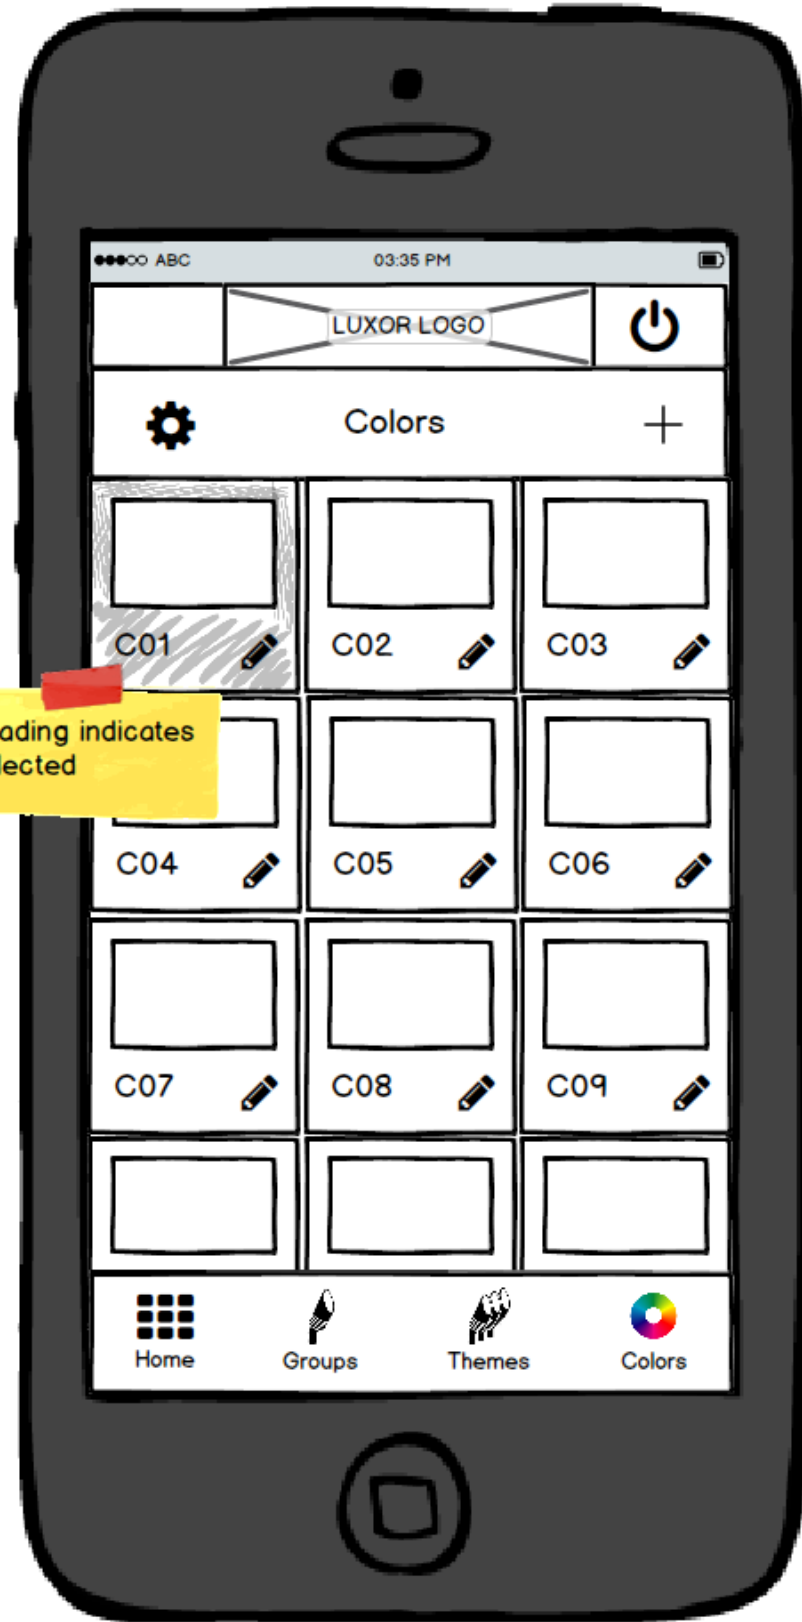


Gear Screen Options

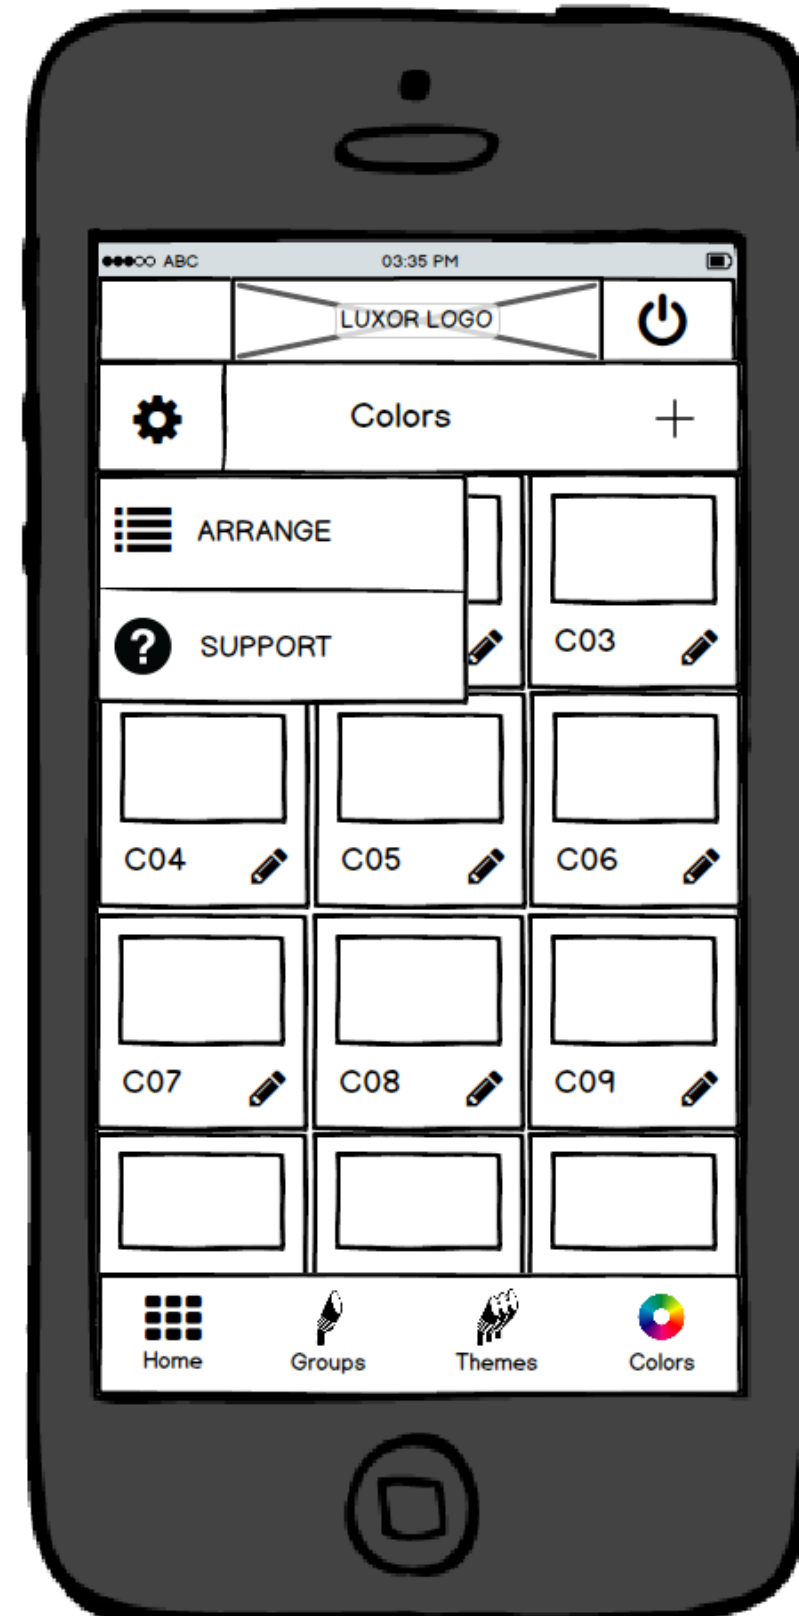

Edit Color Screen

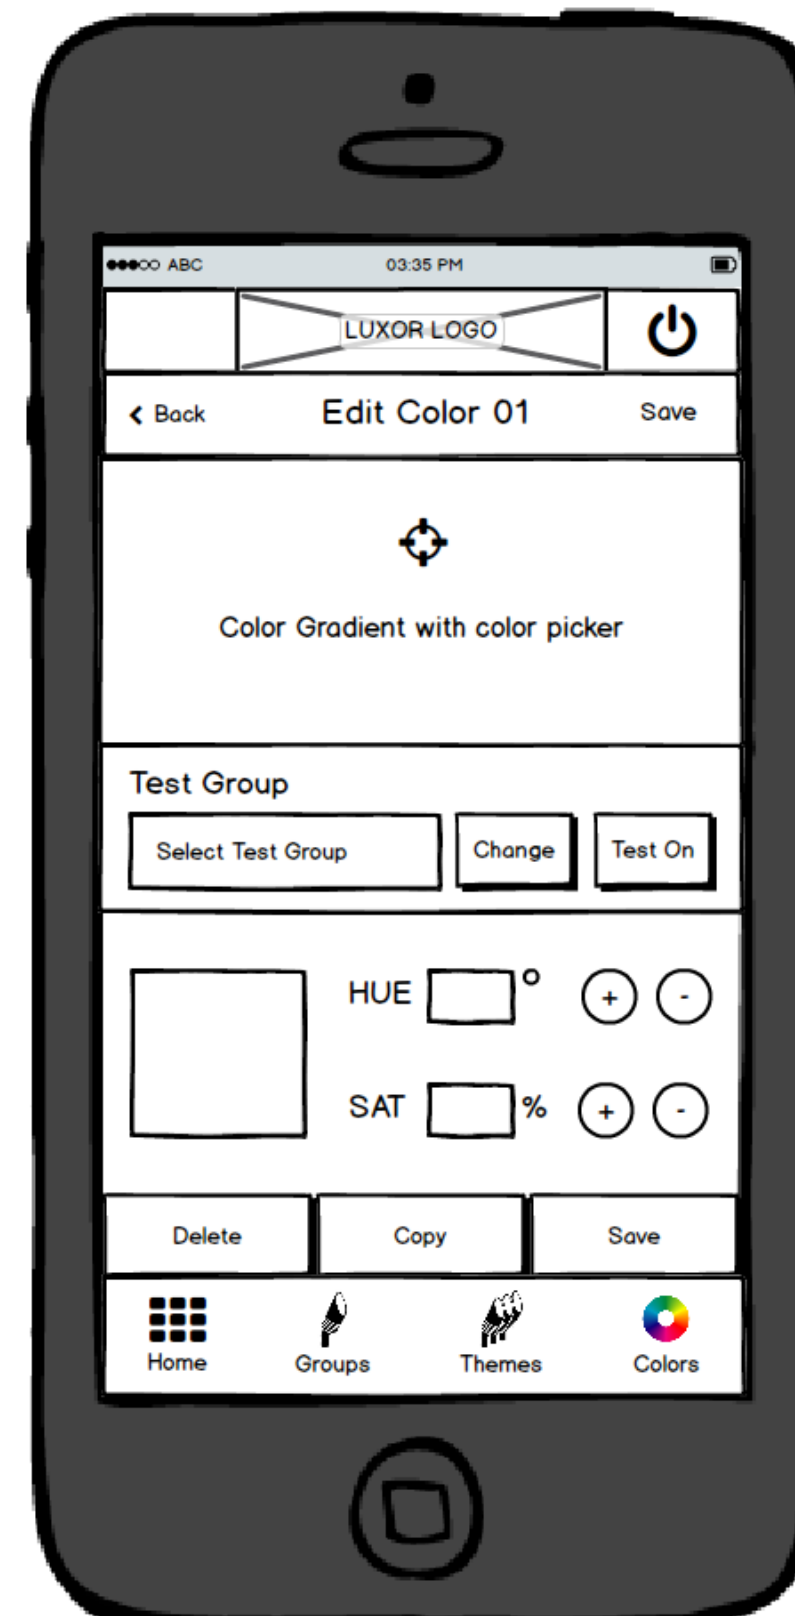


Save Edit Color Screen

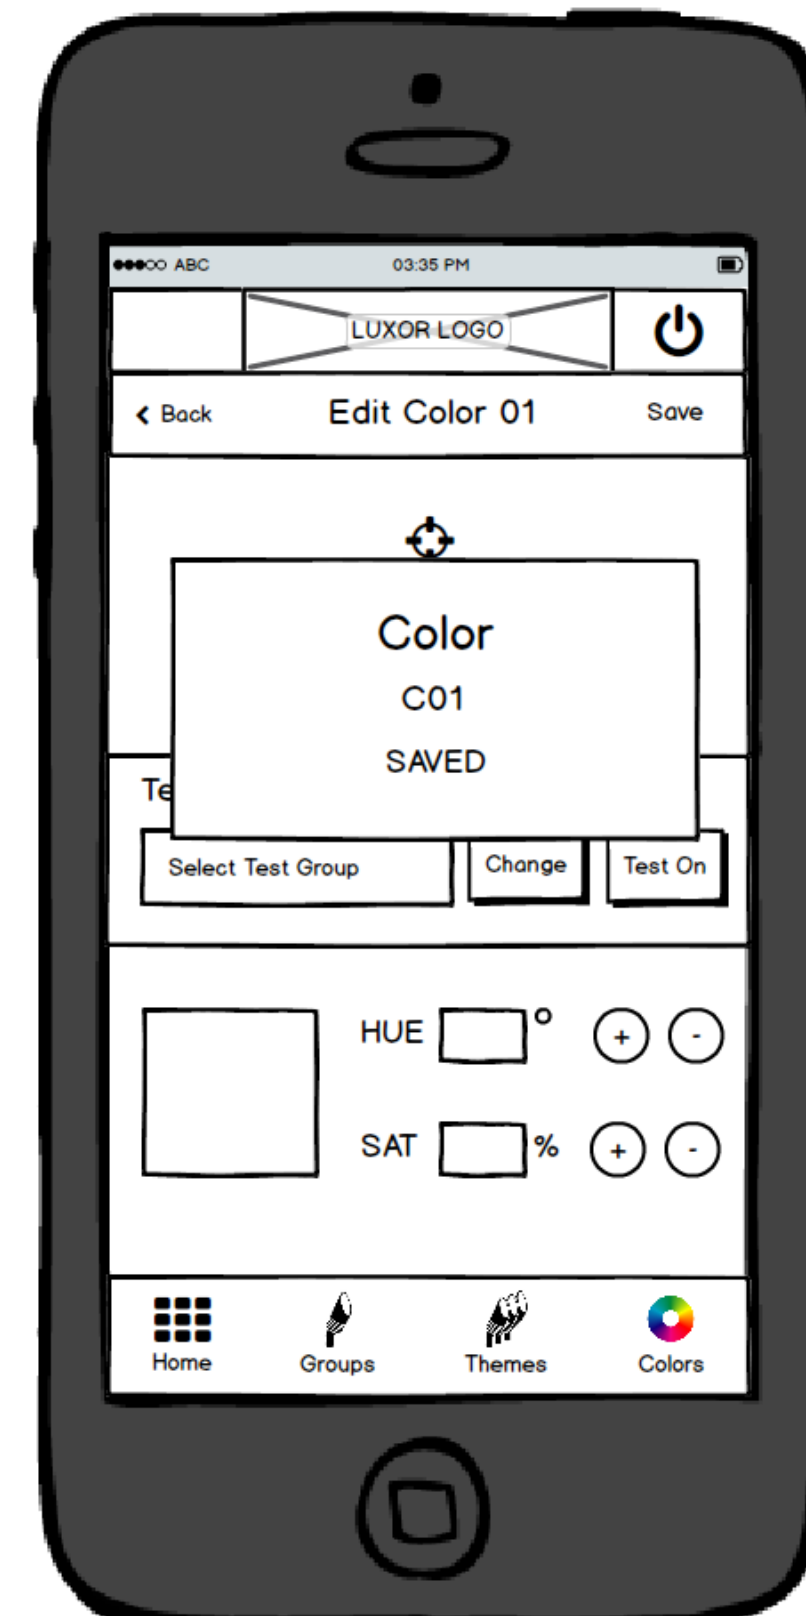

Controller screens

 
Controller Main Screen

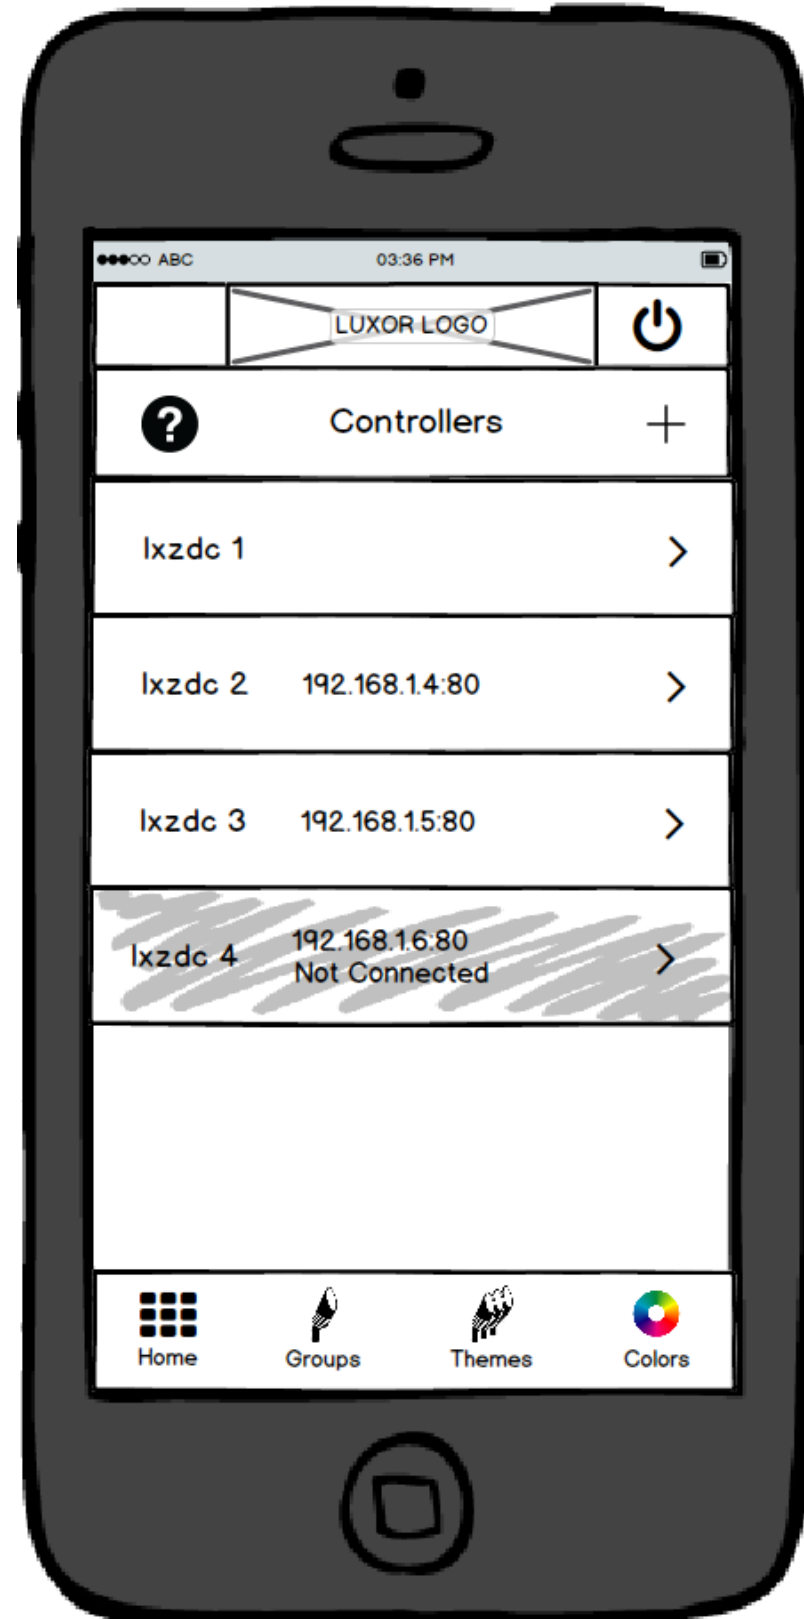


Active
Controllers

Not Responding
Controller(s) with
message

 Adding Controller Screen

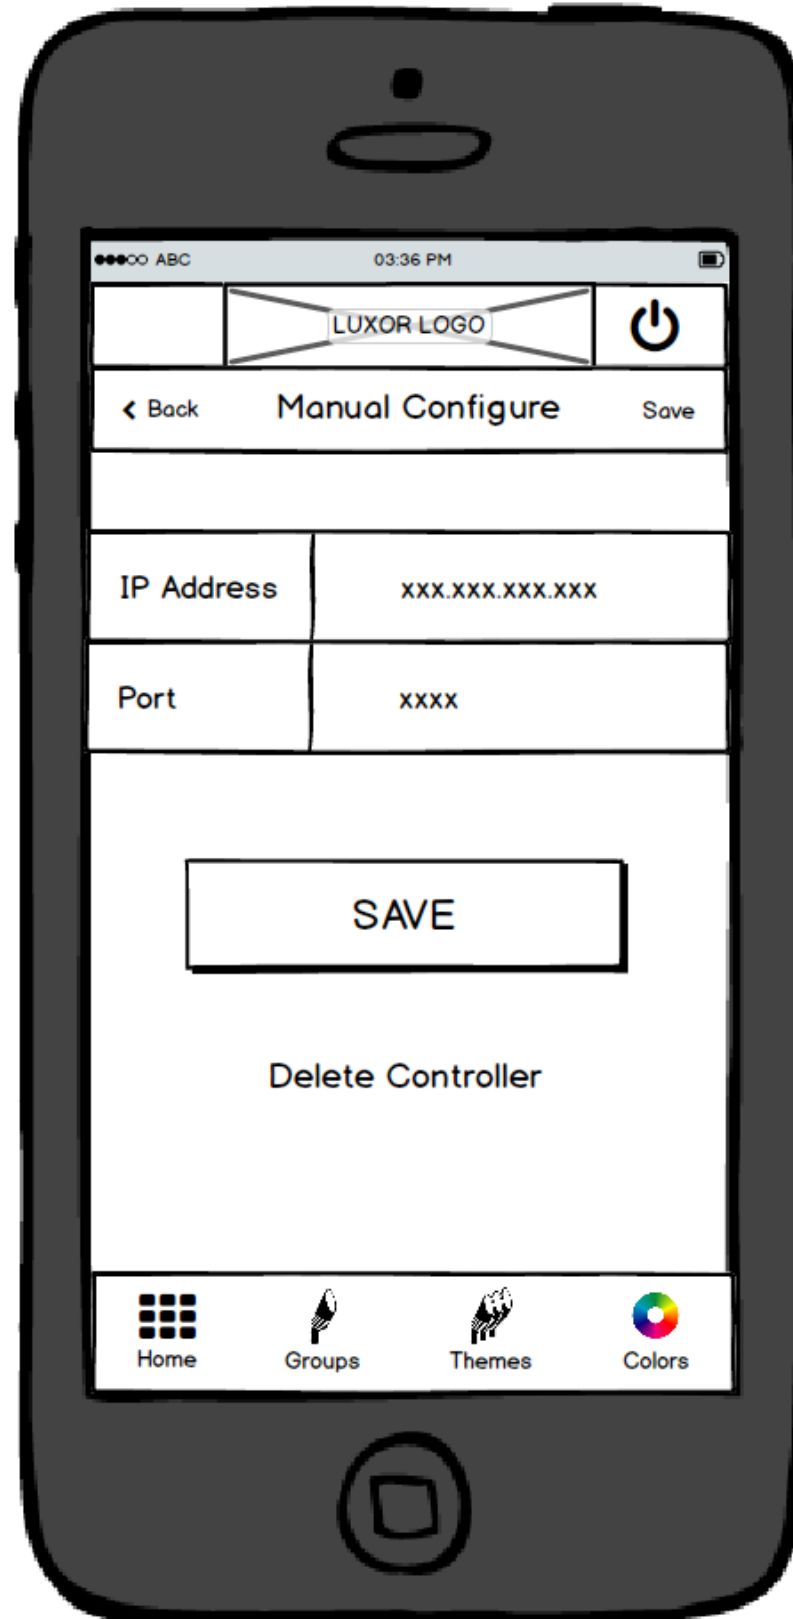


Controller Information Screen

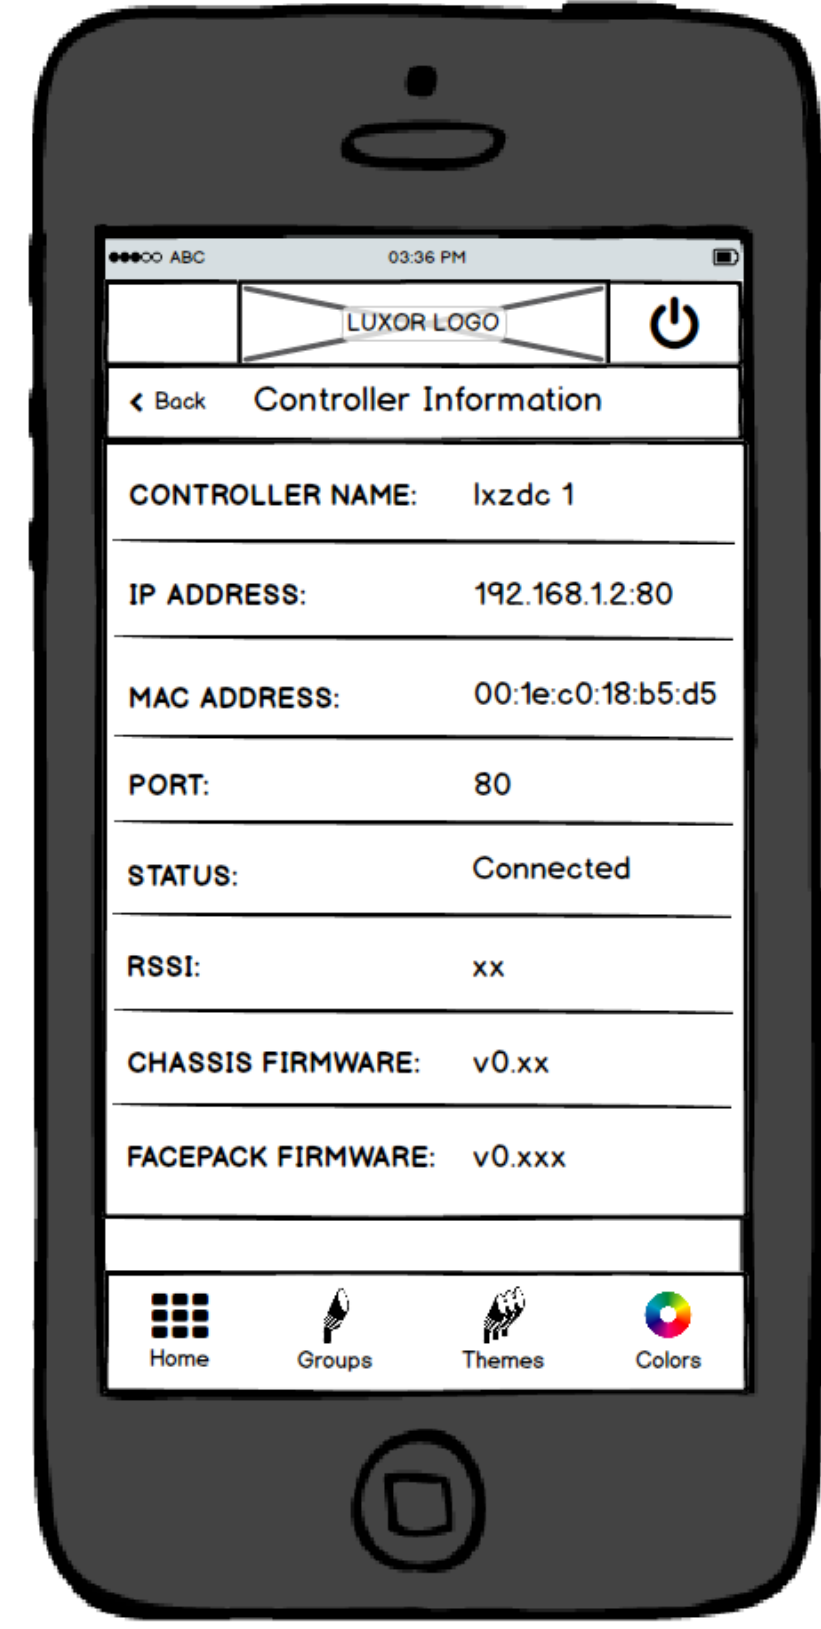

Future Features

Assign Lights Screens

Select Group Screen

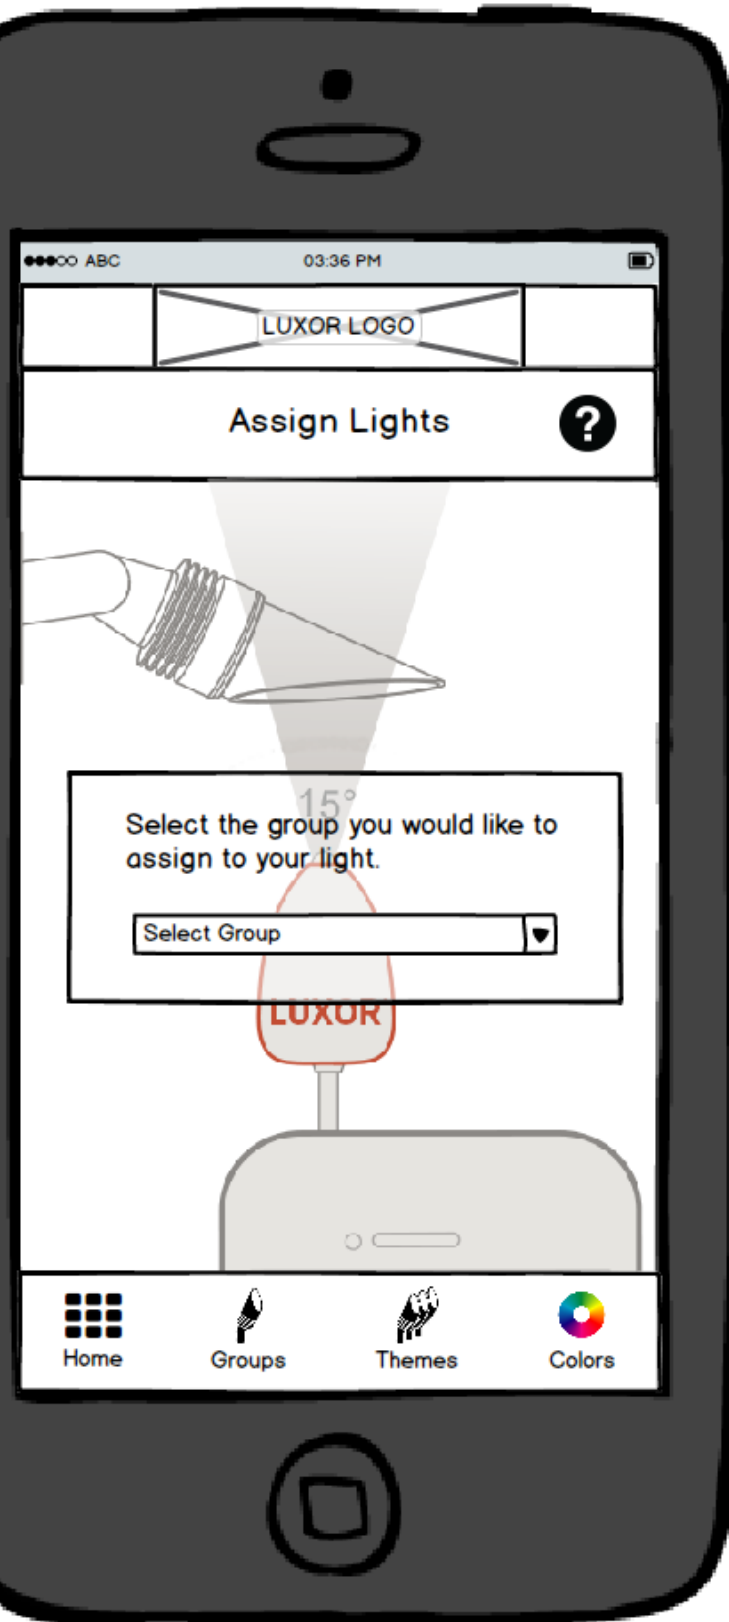

Hold to Assign Screen




Confirmation Screen




About the App and Support Screens


About the App Screen

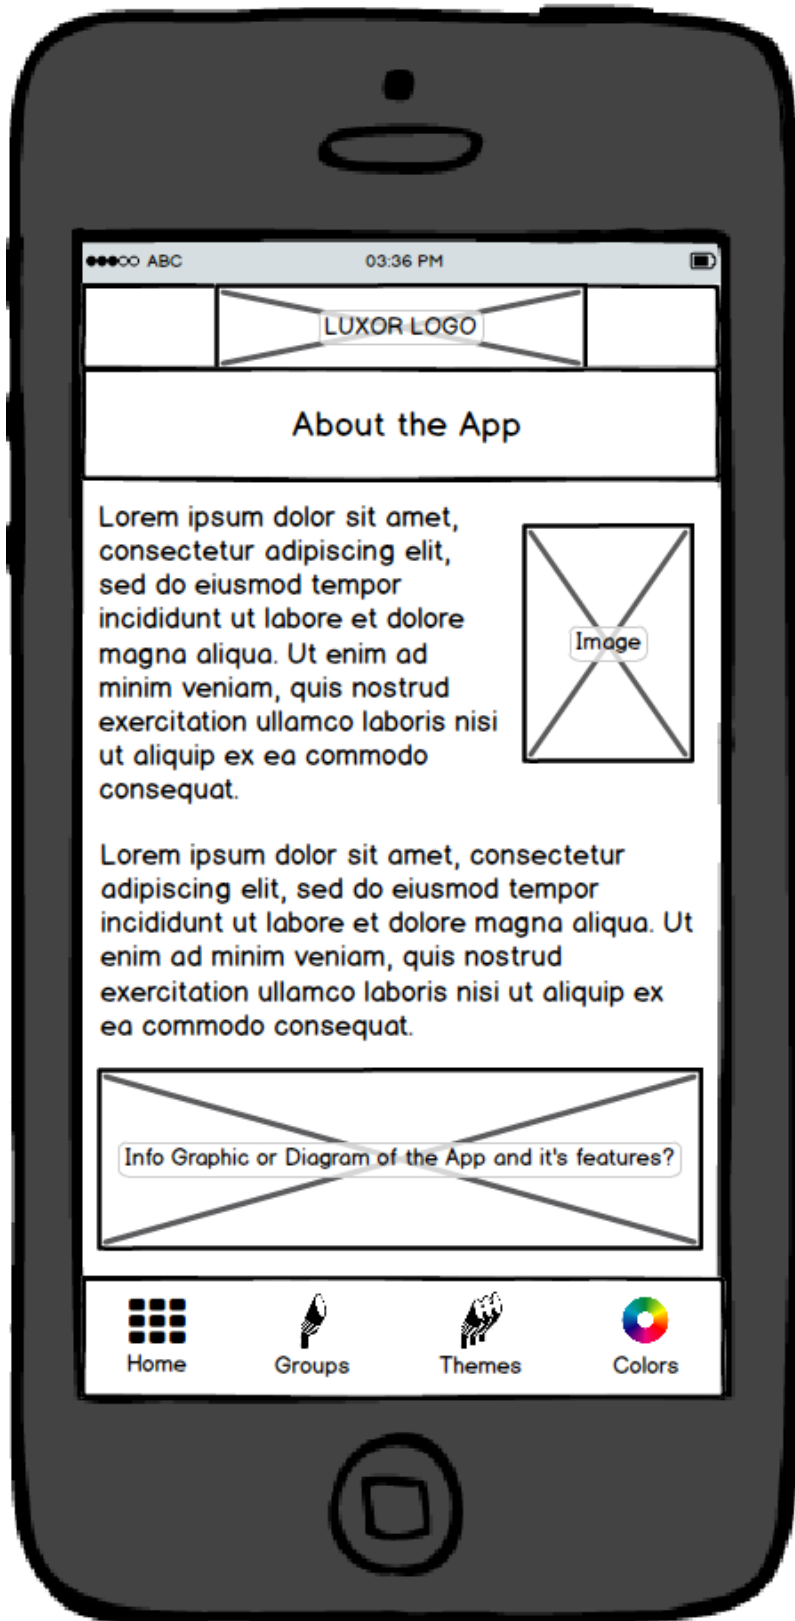



Main Support Screen

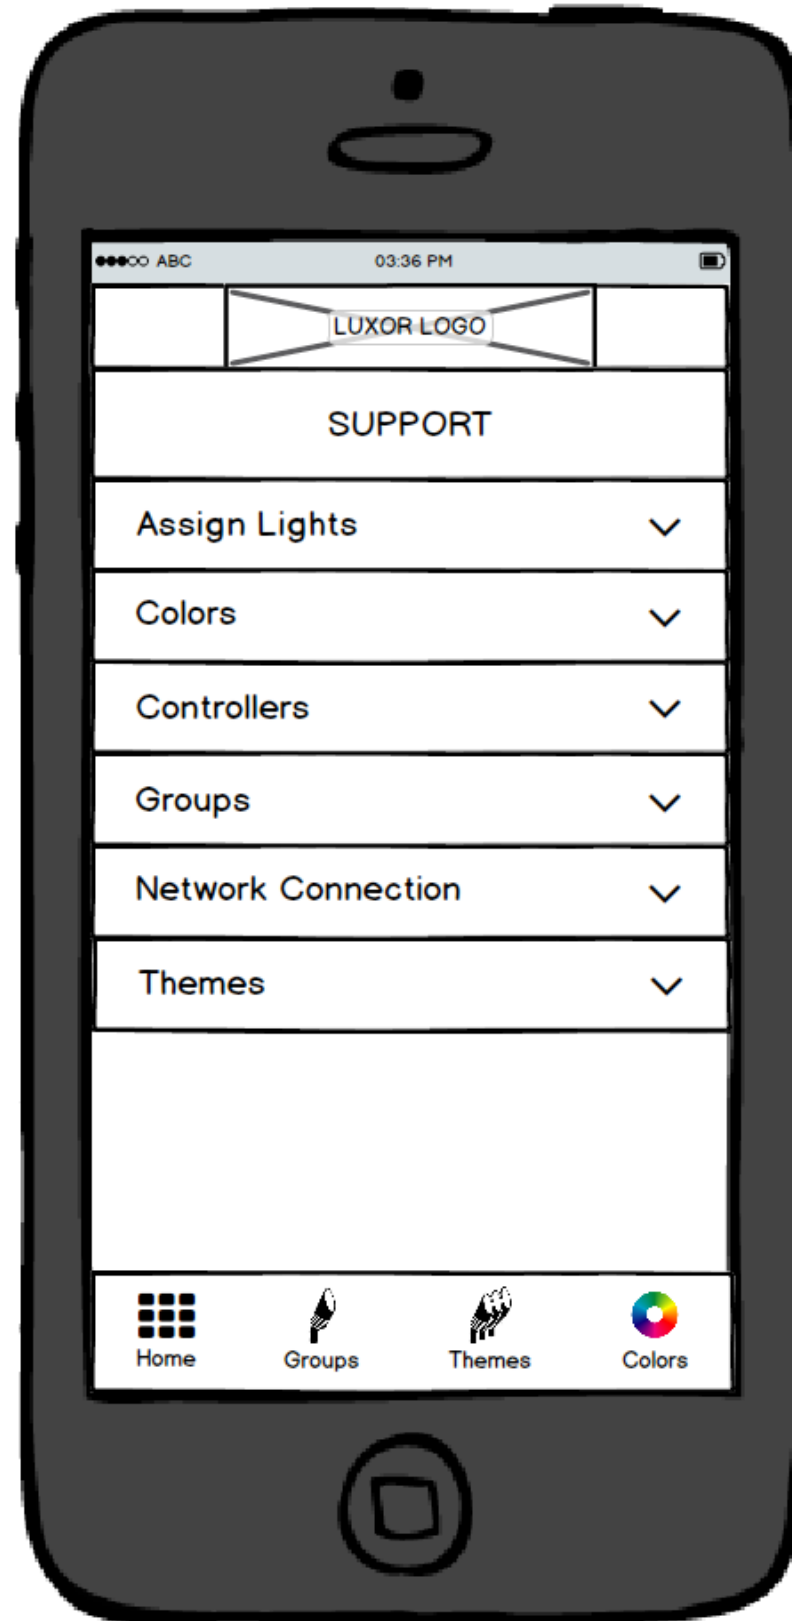

Open Accordion Screen

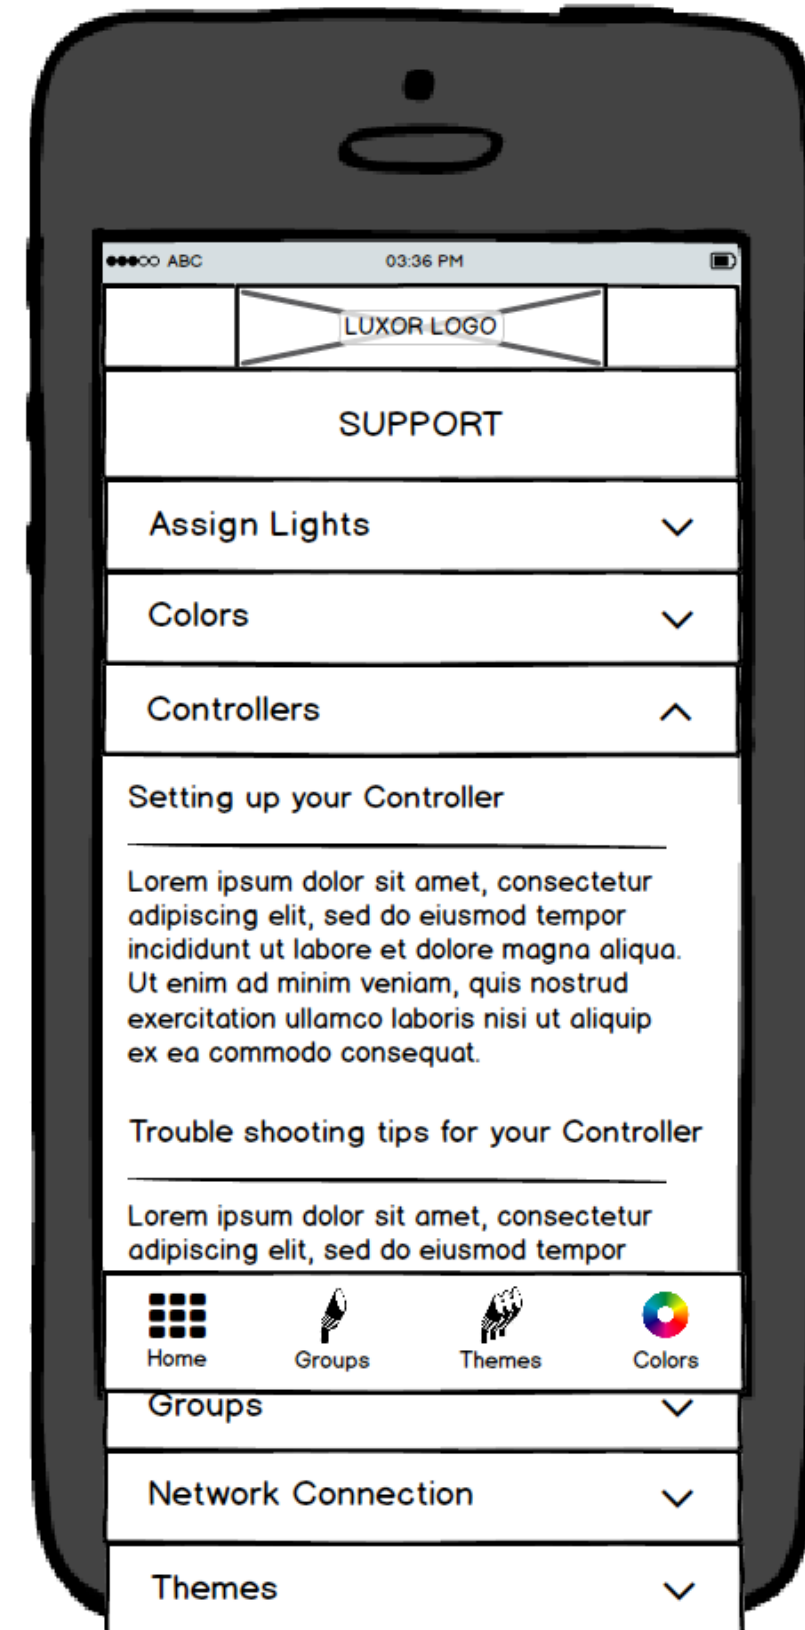 

Luxor ZDC Tablet Home Screen

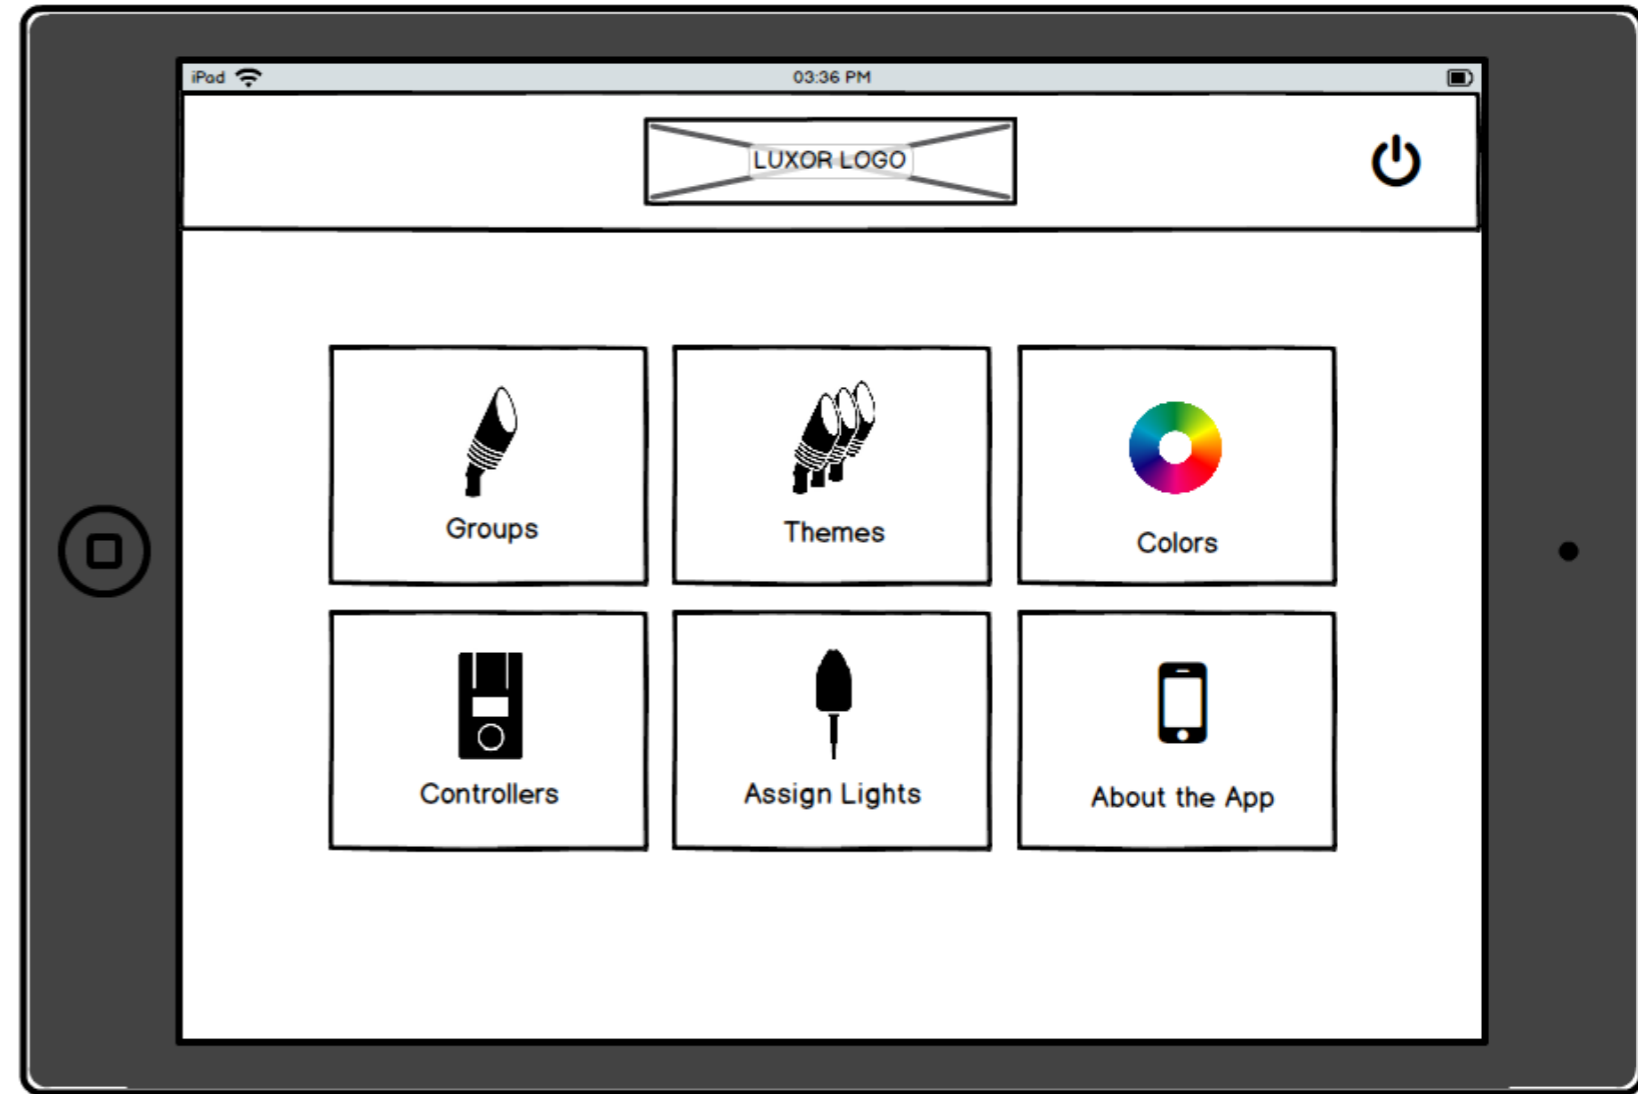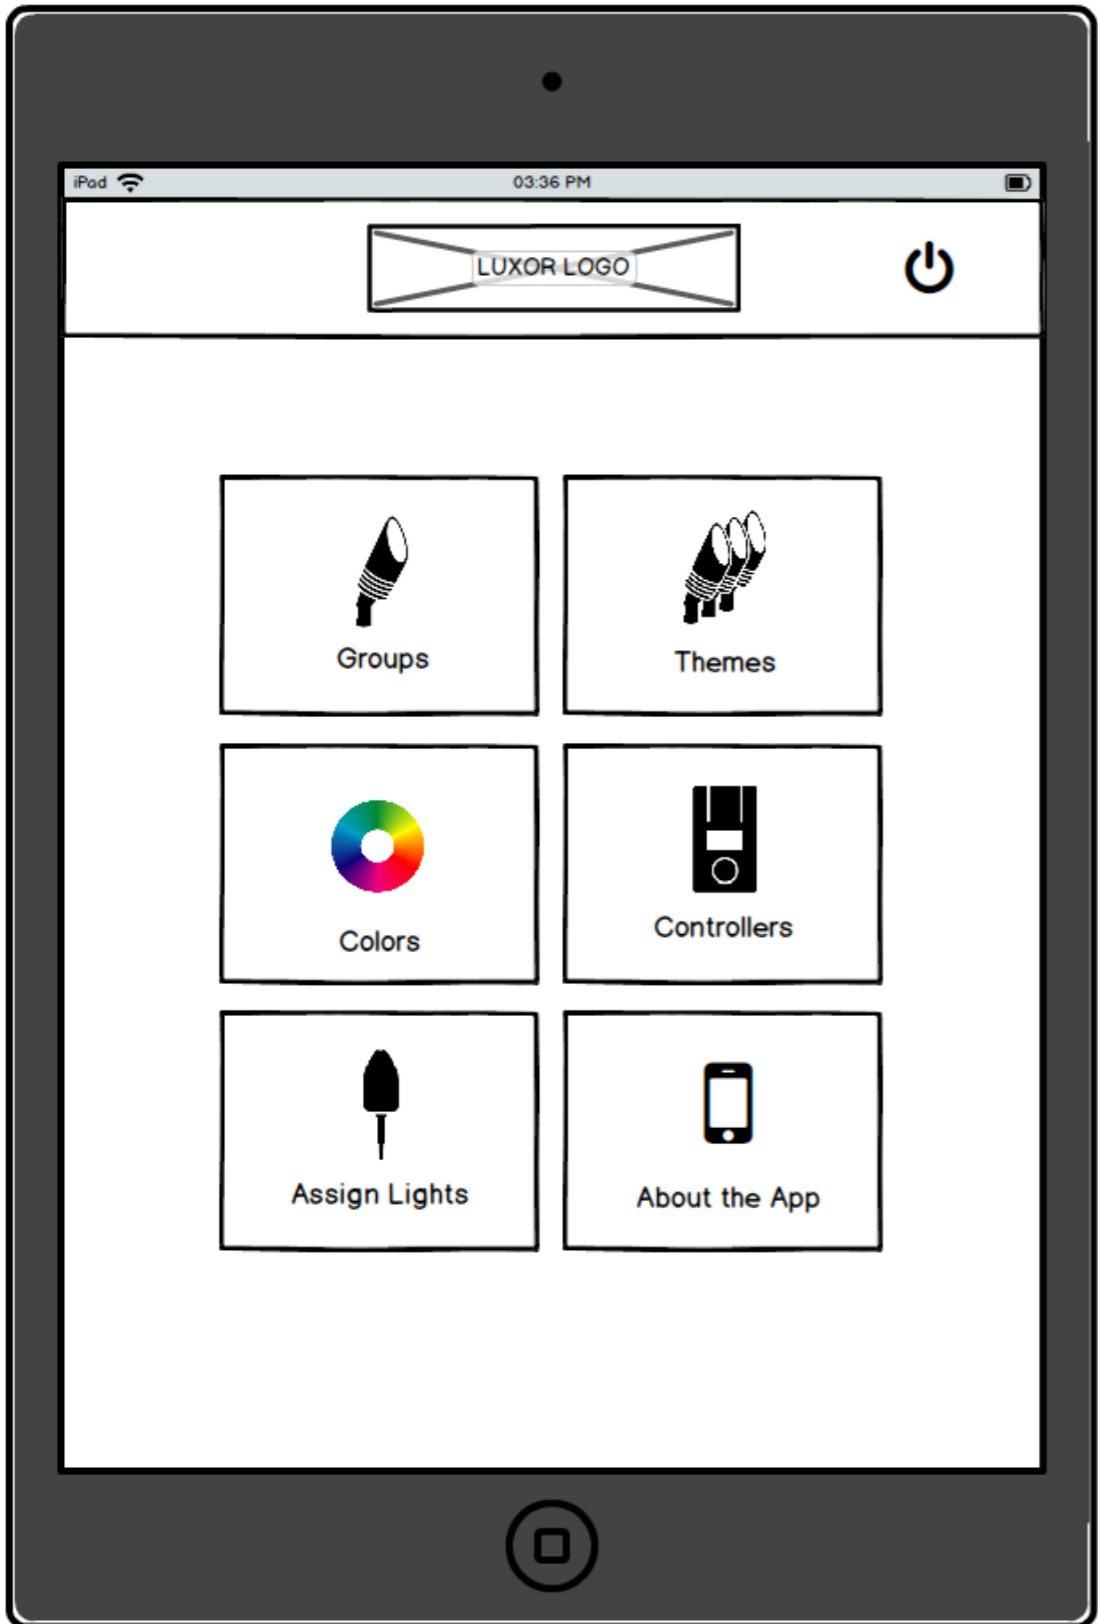  

Subpage Menu Layout

